 


<b>11 PLACARDS &amp; MARKINGS</b> -00 General -10 Exterior Color Schemes & Markings -20 Exterior Placards and Markings -30 Interior Placards and Markings <b>12 SERVICING</b> -00 General -21 Air Conditioning -28 Fuel -29 Hydraulic -30 Ice and Rain Protection -32 Landing Gear -35 Oxygen -38 Water & Waste -49 Airborne Aux Power -79 Engine Oil <b>21 AIR CONDITIONING</b> -00 General -10 Compression -20 Distribution -30 Pressurization Control -40 Heating -50 Cooling -60 Temperature Control -70 Moisture/Air Control <b>22 AUTO FLIGHT</b> -00 General -10 Autopilot -20 Speed-Attitude Control -30 Auto Throttle -40 System Monitor <b>23 COMMUNICATIONS</b> -00 General -10 High Frequency (HF) -20 (VHF) (UHF) -30 Passenger Address & Entertainment -40 Interphone -50 Audio Intergrating -60 Static Discharging -70 Audio & Video Monitoring <b>24 ELECTRICAL POWER</b> -00 General -10 Generator Drive -20 AC Generation -30 DC Generation -40 External Power -50 Elect Load Distribution <b>25 EQUIPMENT &amp; FURNISHING</b> -00 General -10 Flight Compartment -20 Passenger Compartment (SEATS) -30 Buffet/Galleys -40 Lavatories	-50 Cargo Compartment -60 Emergency -70 Accessory Compartment <b>26 FIRE PROTECTION</b> -00 General -10 Detection -20 Extinguishing -30 Explosion Suppression <b>27 FLIGHT CONTORLS</b> -00 General -10 Aileron & Tab -20 Rudder & Tab -30 Elevator & Tab -40 Horizontal Stabilizers -50 Flaps -60 Spoiler, Drag Devices & Variable Aerodynamic Fairings -70 Gust Lock & Damping -80 Lift Augmentation <b>28 FUEL</b> -00 General -10 Storage -20 Distribution -30 Dump -40 Indication <b>29 HYDRAULIC POWER</b> -00 General -10 Main -20 Auxiliary -30 Indicating <b>30 ICE &amp; RAIN PROTECTION</b> -00 General -10 Airfoil -20 Air Intakes -30 Pitot Static -40 Windows & Windshields -50 Antennas & Radomes -60 Props/Rotors -70 Water Lines -80 Detection <b>31 INDICATION &amp; RECORDING SYS</b> -00 General -10 Unassigned -20 Unassigned -30 Records -40 Central Computers -50 Central Warning System <b>32 LANDING GEAR</b> -00 General -10 Main Gear & Doors -20 Nose Gear & Doors -30 Extend & Retract -40 Wheels & Brakes -50 Steering -60 Position & Warning -70 Supplemental Gear	<b>LIGHTS</b> -00 General -10 Flight Compartment -20 Passenger Compartment -30 Cargo & Service Comp -40 Exterior -50 Emergency <b>34 NAVIGATION</b> -00 General -10 Flt Environment Data -20 Attitude & Direction -30 Landing & Taxi Aids -40 Independent Position Determination -50 Dependant Position Determining -60 Position Compute <b>35 OXYGEN</b> -00 General -10 Crew -20 Passenger -30 Portable <b>36 PNEUMATICS</b> -00 General -10 Distribution -20 Indicating <b>38 WATER &amp; WASTE</b> -00 General -10 Potable -20 Wash -30 Waste Disposal -40 Air Supply <b>45 CENTRAL MAINT COMPUTER</b> -00 General -10 Unassigned -20 Unassigned -30 Unassigned <b>46 INFORMATION SYSTEMS</b> ( 777 ONLY ) <b>49 AUXILIARY POWER</b> -00 General -10 Powerplant -20 Engine -30 Engine Fuel & Cntrl -40 Ignition/Starting -50 Air -60 Engine Cntrl's -70 Indication -80 Exhaust -90 Oil <b>51 STRUCTURES</b> -00 General <b>52 DOORS</b> -00 General -10 Passenger/Crew -20 Emergency Exit -30 Cargo -40 Service -50 Fixed Interiors -60 Entrance Stairs -70 Door Warning -80 Landing Gear	<b>53 FUSELAGE</b> -00 General -10 Main Frame -20 Auxillary Structure -30 Plates/Skin -40 Attach Fittings -50 Aerodynamic Fairings <b>54 NACELLES/PYLONS</b> -00 General -10 Main Frame -20 Auxiliary Structures -30 Plates/Skin -40 Attach Fittings -50 Fillets/Fairings <b>55 STABILIZERS</b> -00 General -20 Horizontal Stabilizers -30 Vertical Stabilizer -40 Rudder -50 Attach Fittings <b>56 WINDOWS</b> -00 General -10 Flight Compartment -20 Cabin -30 Door -40 Inspection & Observation <b>57 WINGS</b> -00 General -10 Main Frame -20 Auxiliary Structures -30 Plates/Skin -40 Attach Fittings -50 Flight Surfaces <b>71 POWER PLANT</b> -00 General -10 Cowling -20 Mounts -30 Fireseals -40 Attach Fittings -50 Electrical Harness -60 Air Intakes -70 Engine Drains <b>72 ENGINES TURBINE TURBO</b> -00 General -10 Reduction Gear & Shaft Sections -20 Air Inlet Section -30 Compressor -40 Combustor -50 Turbine -60 Accessory Drive -70 Bypass Section <b>73 ENGINE FUEL &amp; CONTROL</b> -00 General -10 Distribution -20 Controlling -30 Indication <b>74 IGNITION</b> -00 General	-10 Electrical Power Supply -20 Distribution -30 Switching <b>75 AIR</b> -00 General -10 Engine Anti-Icing -20 Accessory Cooling -30 Compressor Control -40 Indication <b>76 ENGINE CONTROLS</b> -00 General -10 Power Control -20 Emergency Shut down <b>77 ENGINE INDICATION</b> -00 General -10 Power -20 Temperature -30 Analyzers <b>78 EXHAUST</b> -00 General -10 Collector/nozzle -20 Noise Suppression -30 Thrust Reverser -40 Supplemental Air <b>79 OIL</b> -00 General -10 Storage -20 Distribution -30 Indicating <b>80 STARTING</b> -00 General -10 Cranking  MAINTENANCE MANUAL PAGE BREAK DOWN  Description and Operation 1 to 100  Troubleshooting 101 to 200  Maintenance Practices 201 to 300  Servicing 301 to 400  Removal/Installation 401 to 500  Adjustment/Test 501 to 600  Inspection/Check 601 to 700  Cleaning/Painting 701 to 800  Approved Repairs 801 to 900
--	---	--	--	---







# ***BOEING 777-200***

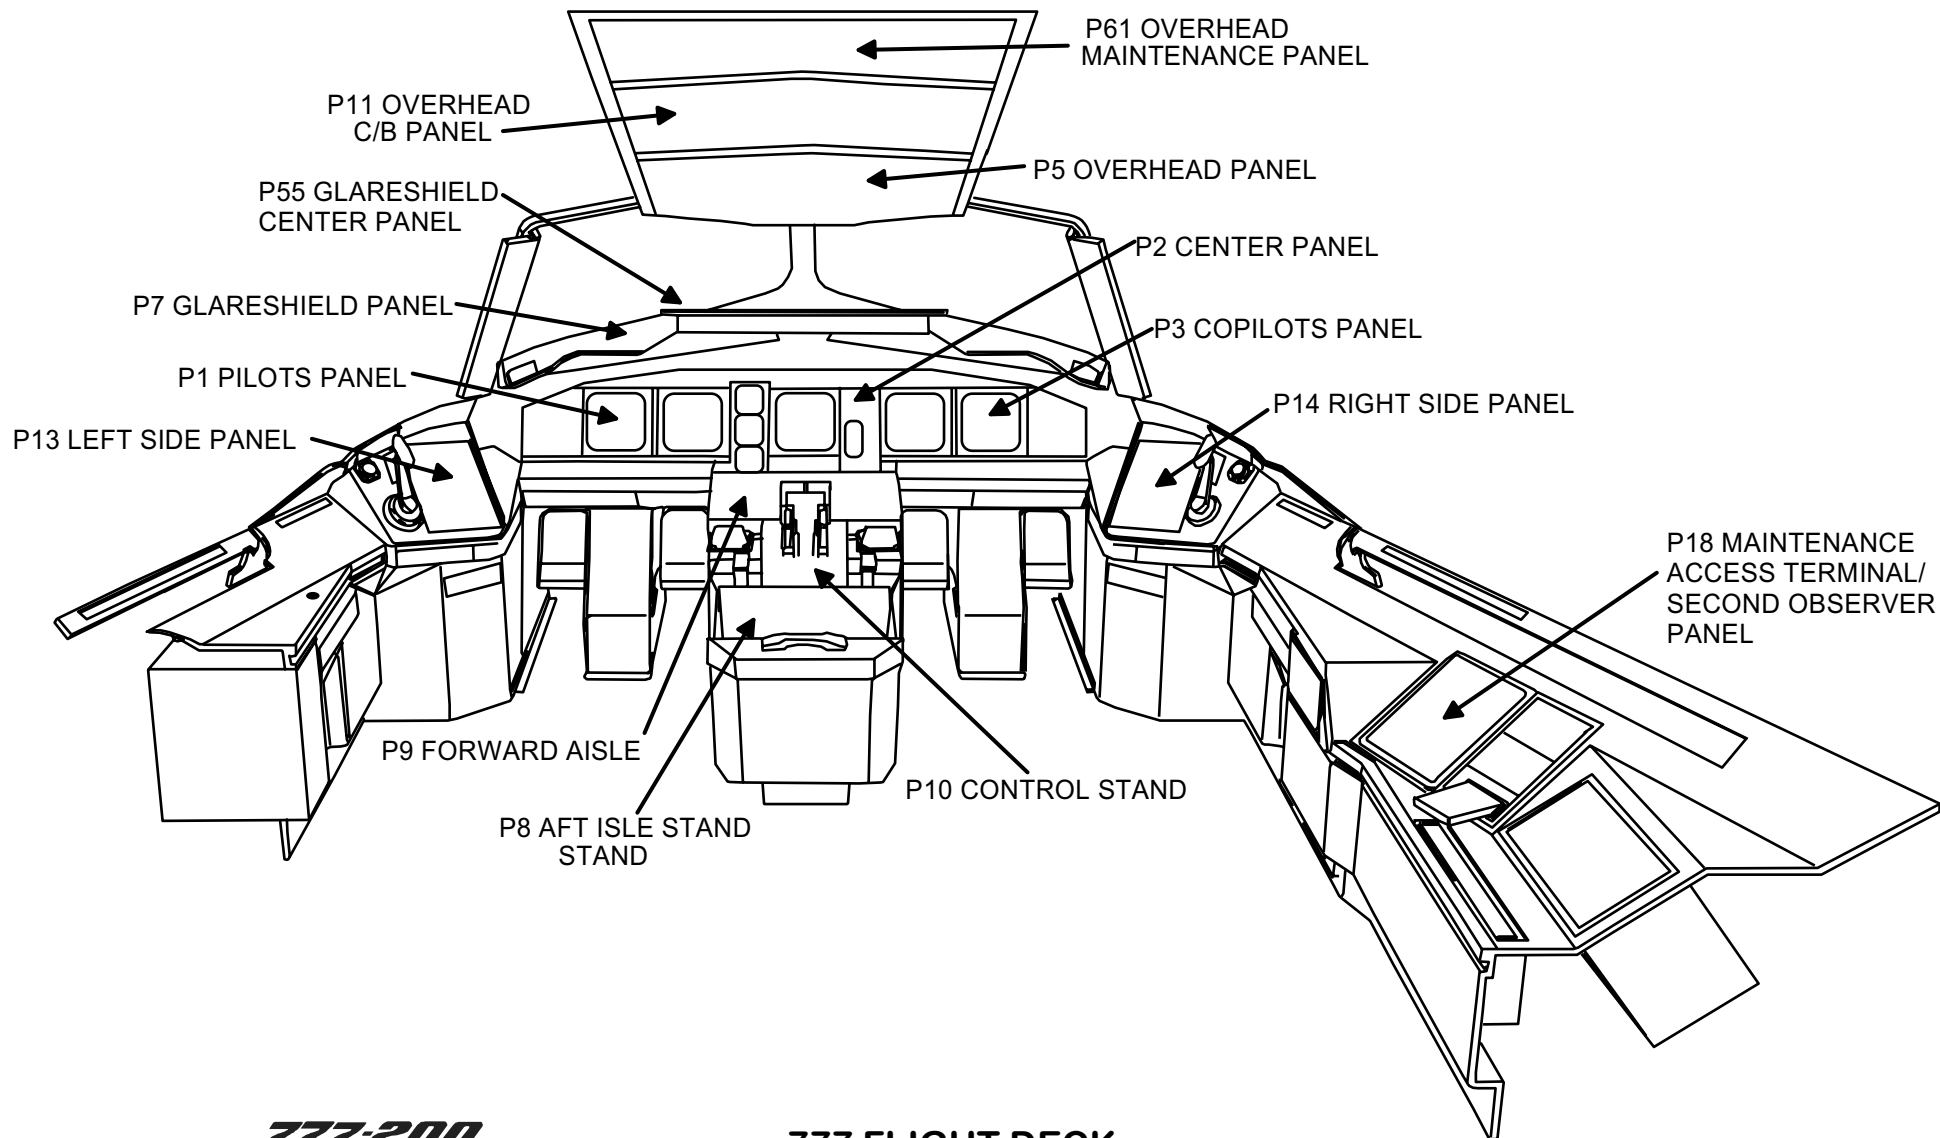

      ***777-200***  
**SYSTEMS INTRODUCTION SUPPLEMENT**  
REF: MM 31-00-00

**777 FLIGHT DECK  
CONTROL PANELS  
IS - 216**

# BOEING 777-200

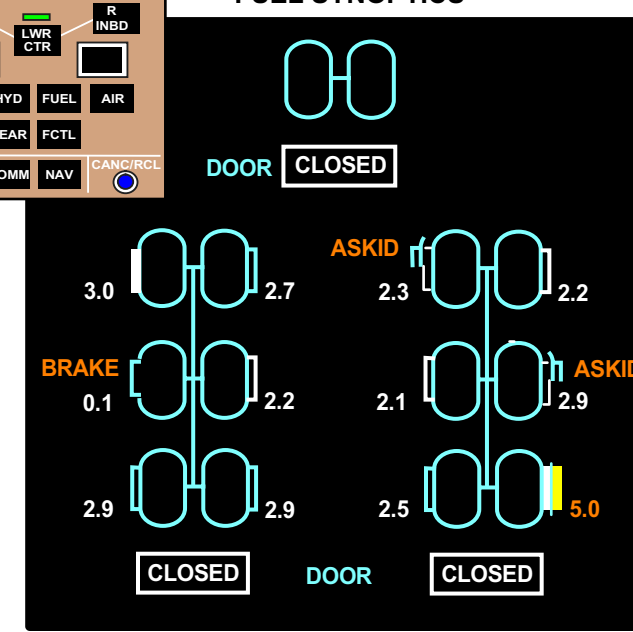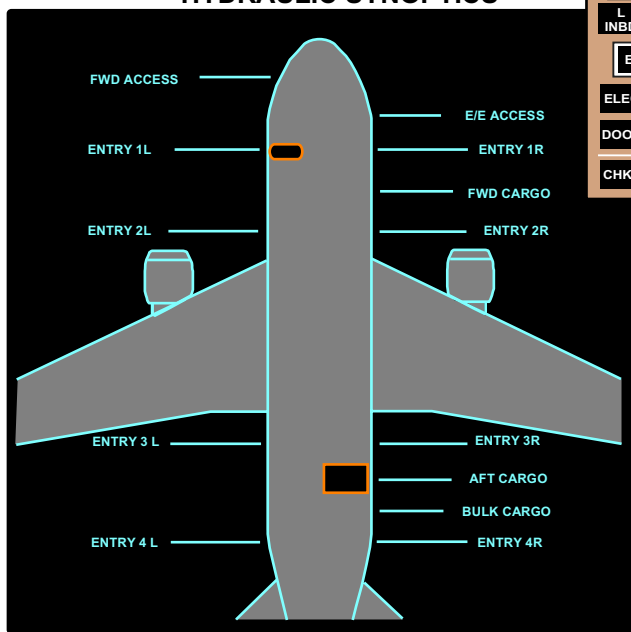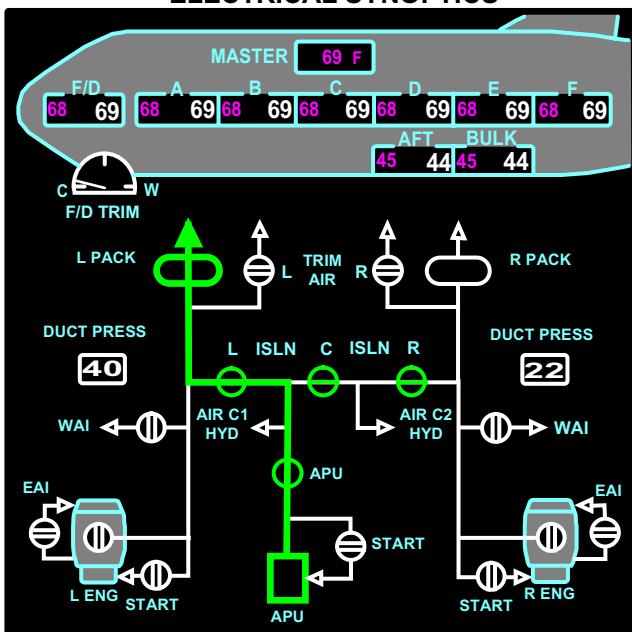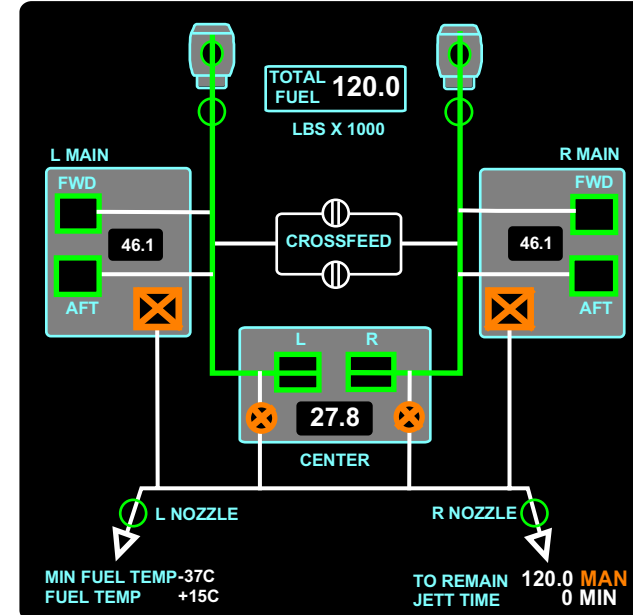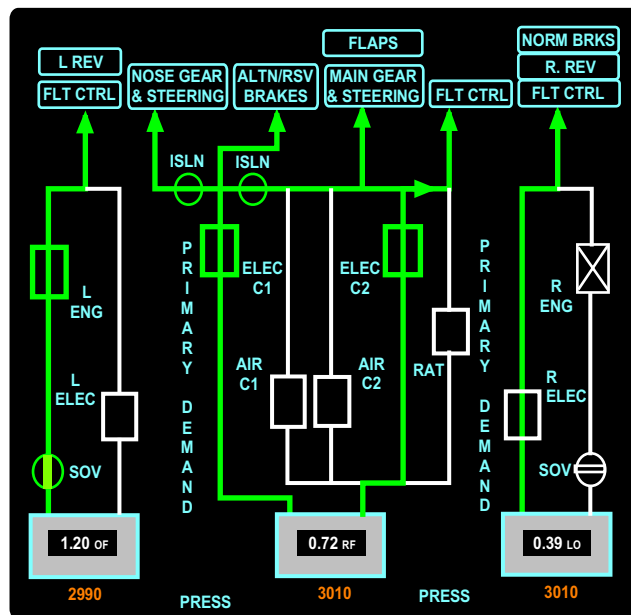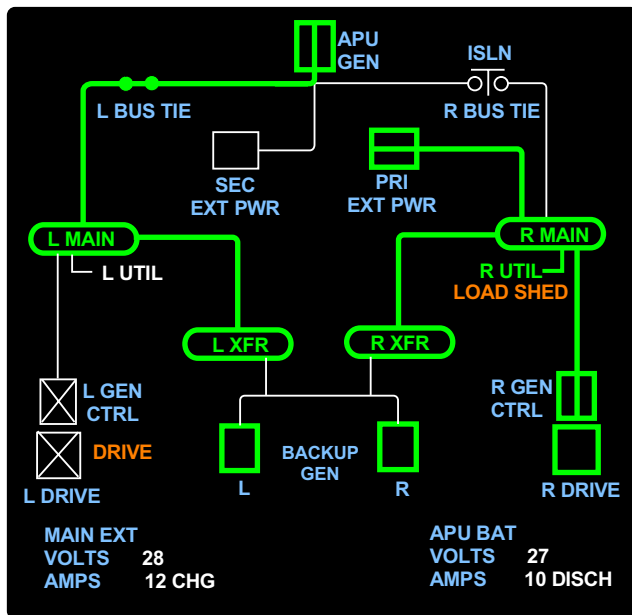


AIR SYNOPTICS



DOORS SYNOPTICS

GEAR SYNOPTICS


# BOEING 777-200

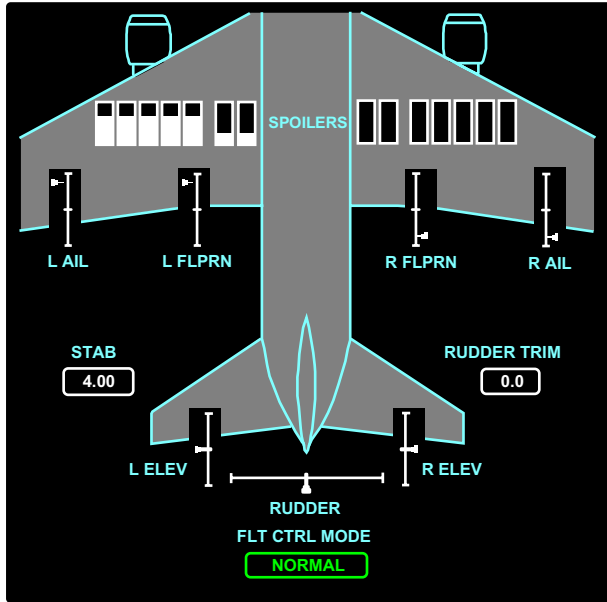 


FLIGHT CONTROLS SYNOPTIC

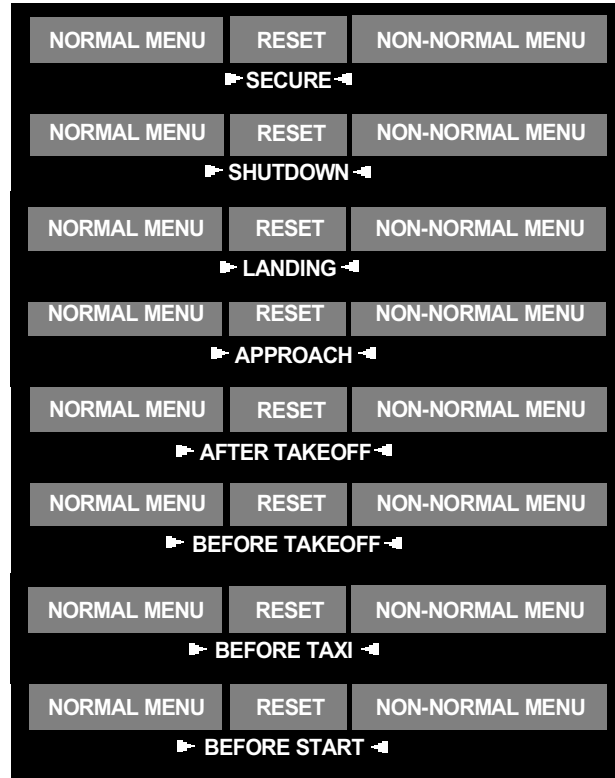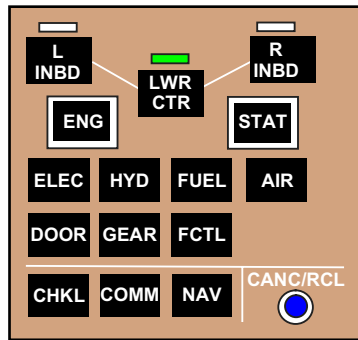  

COMM DISPLAY

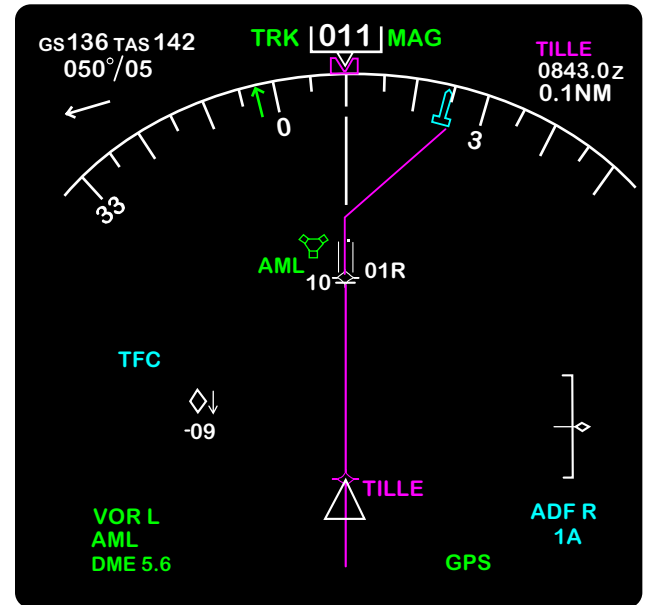 


NAV DISPLAY



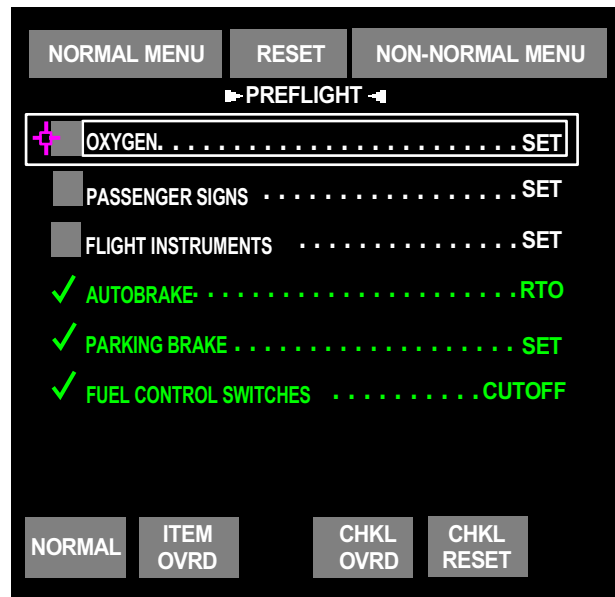 


CHKL DISPLAY

# BOEING 777-200

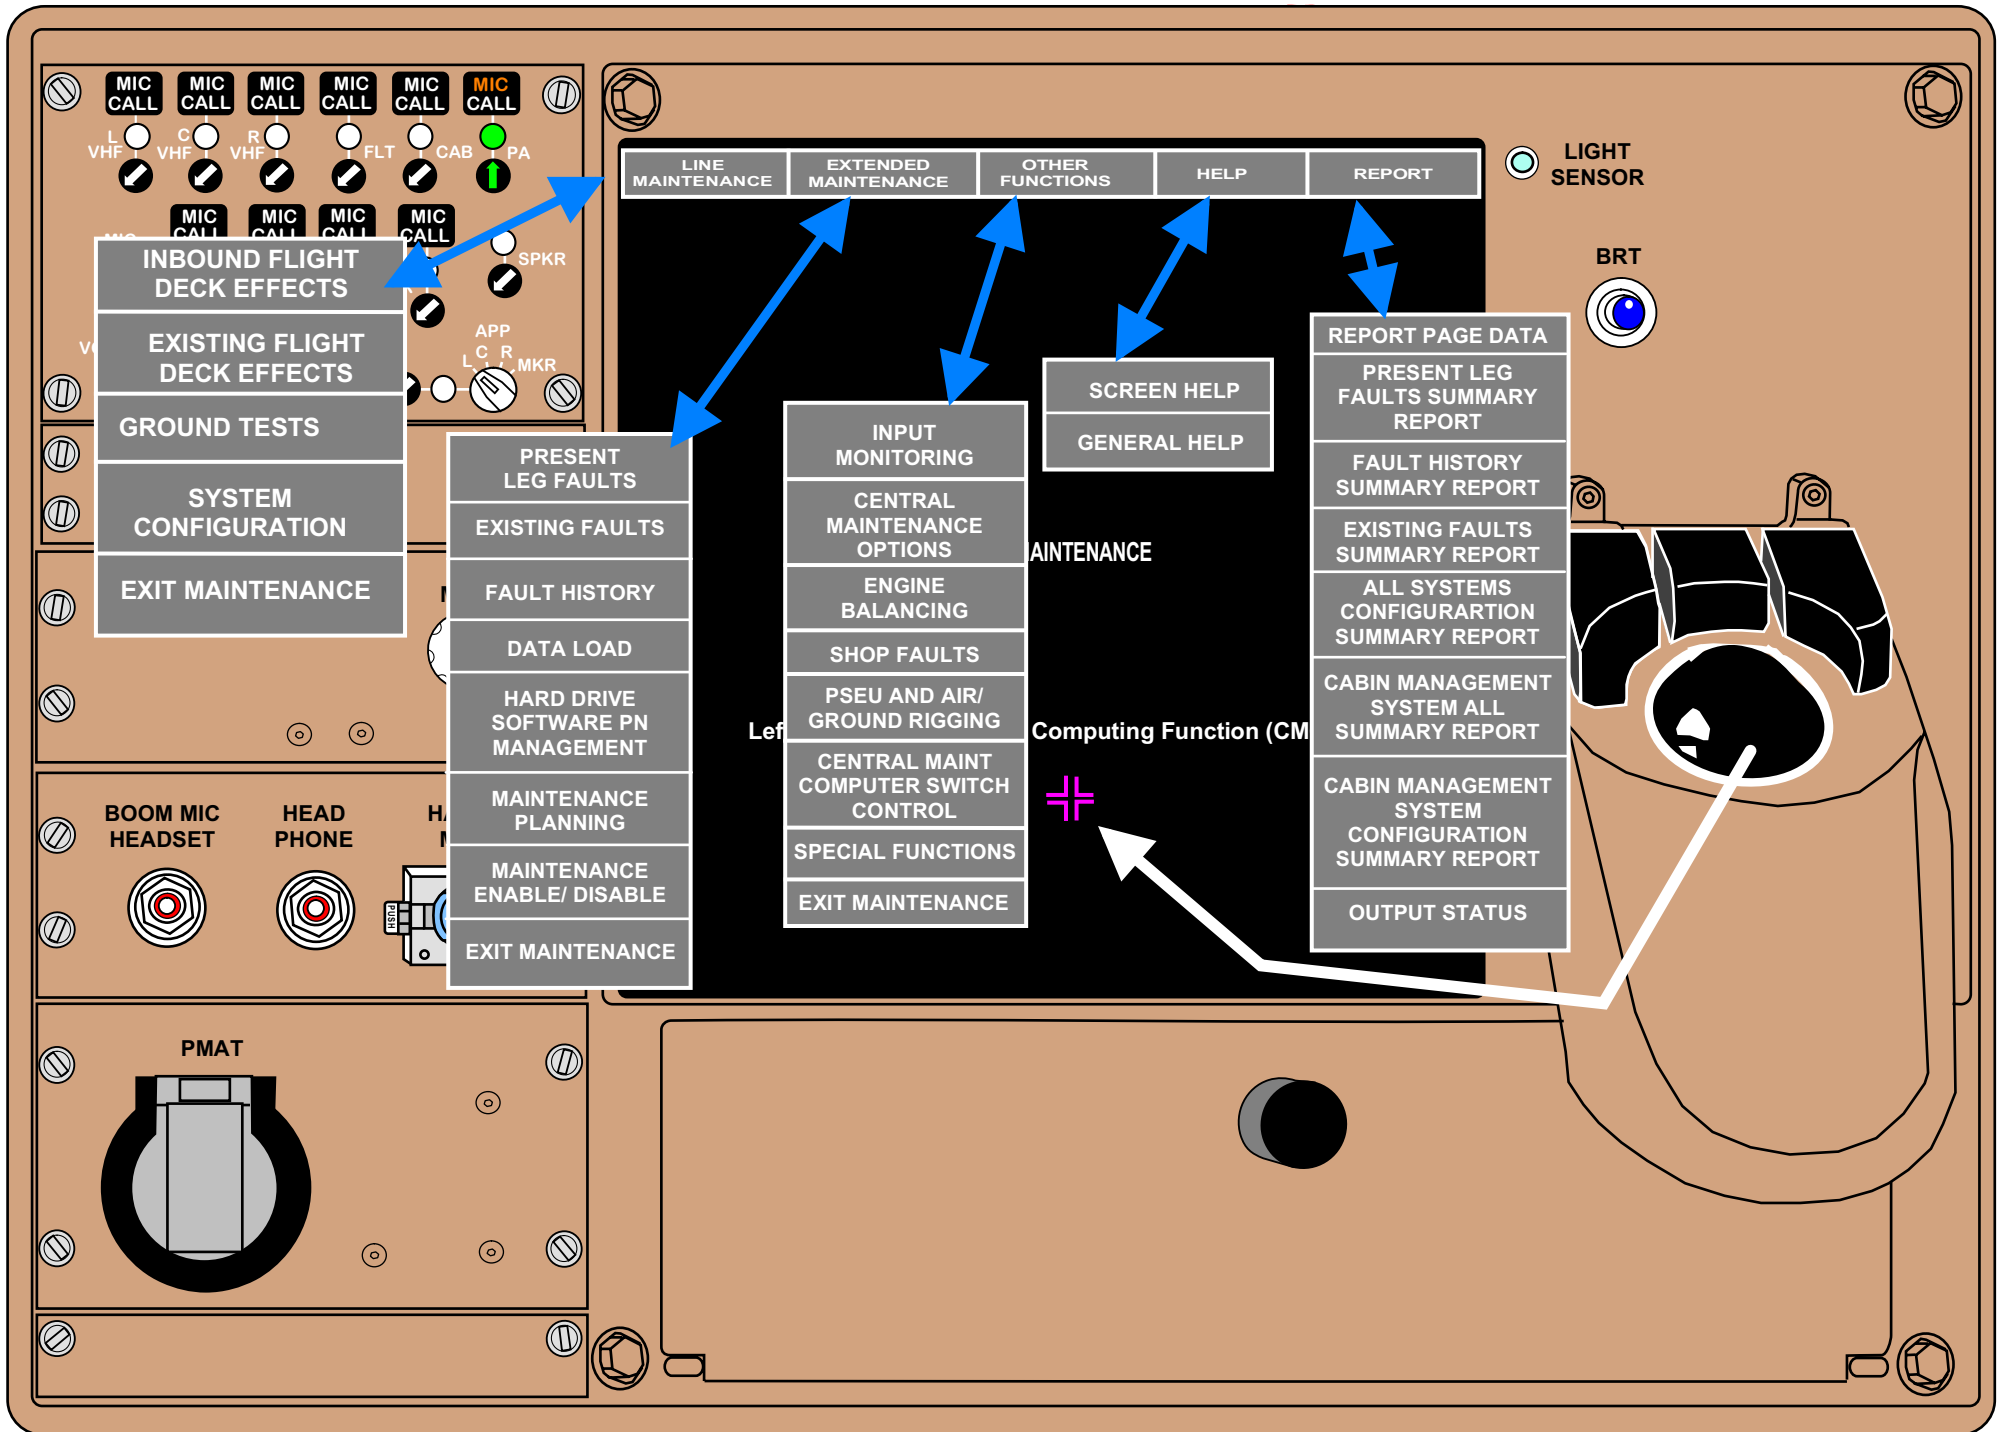 


# BOEING 777-200

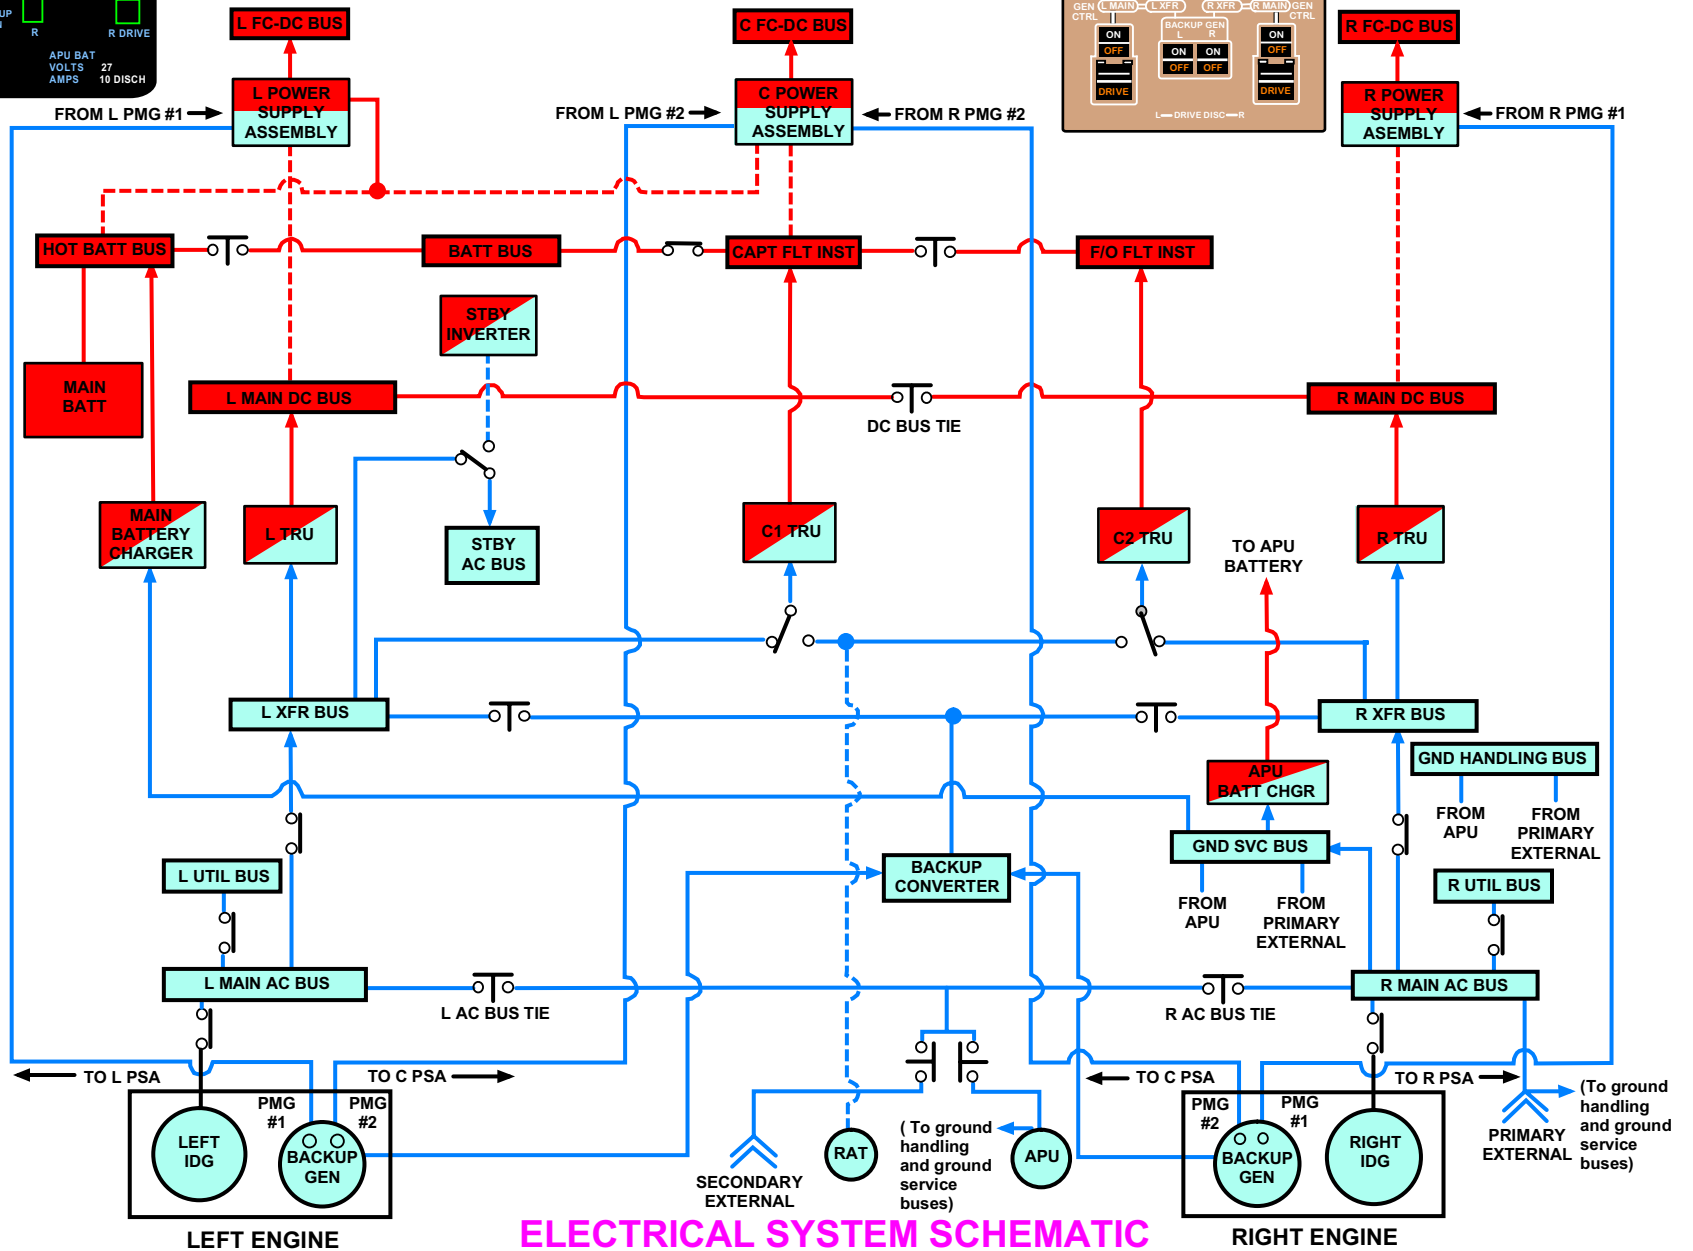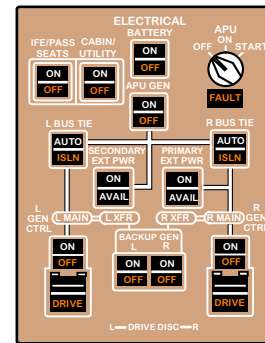  
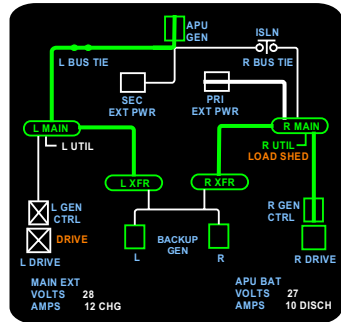 


## ELECTRICAL SYSTEM SCHEMATIC

 
# BOEING 777-200

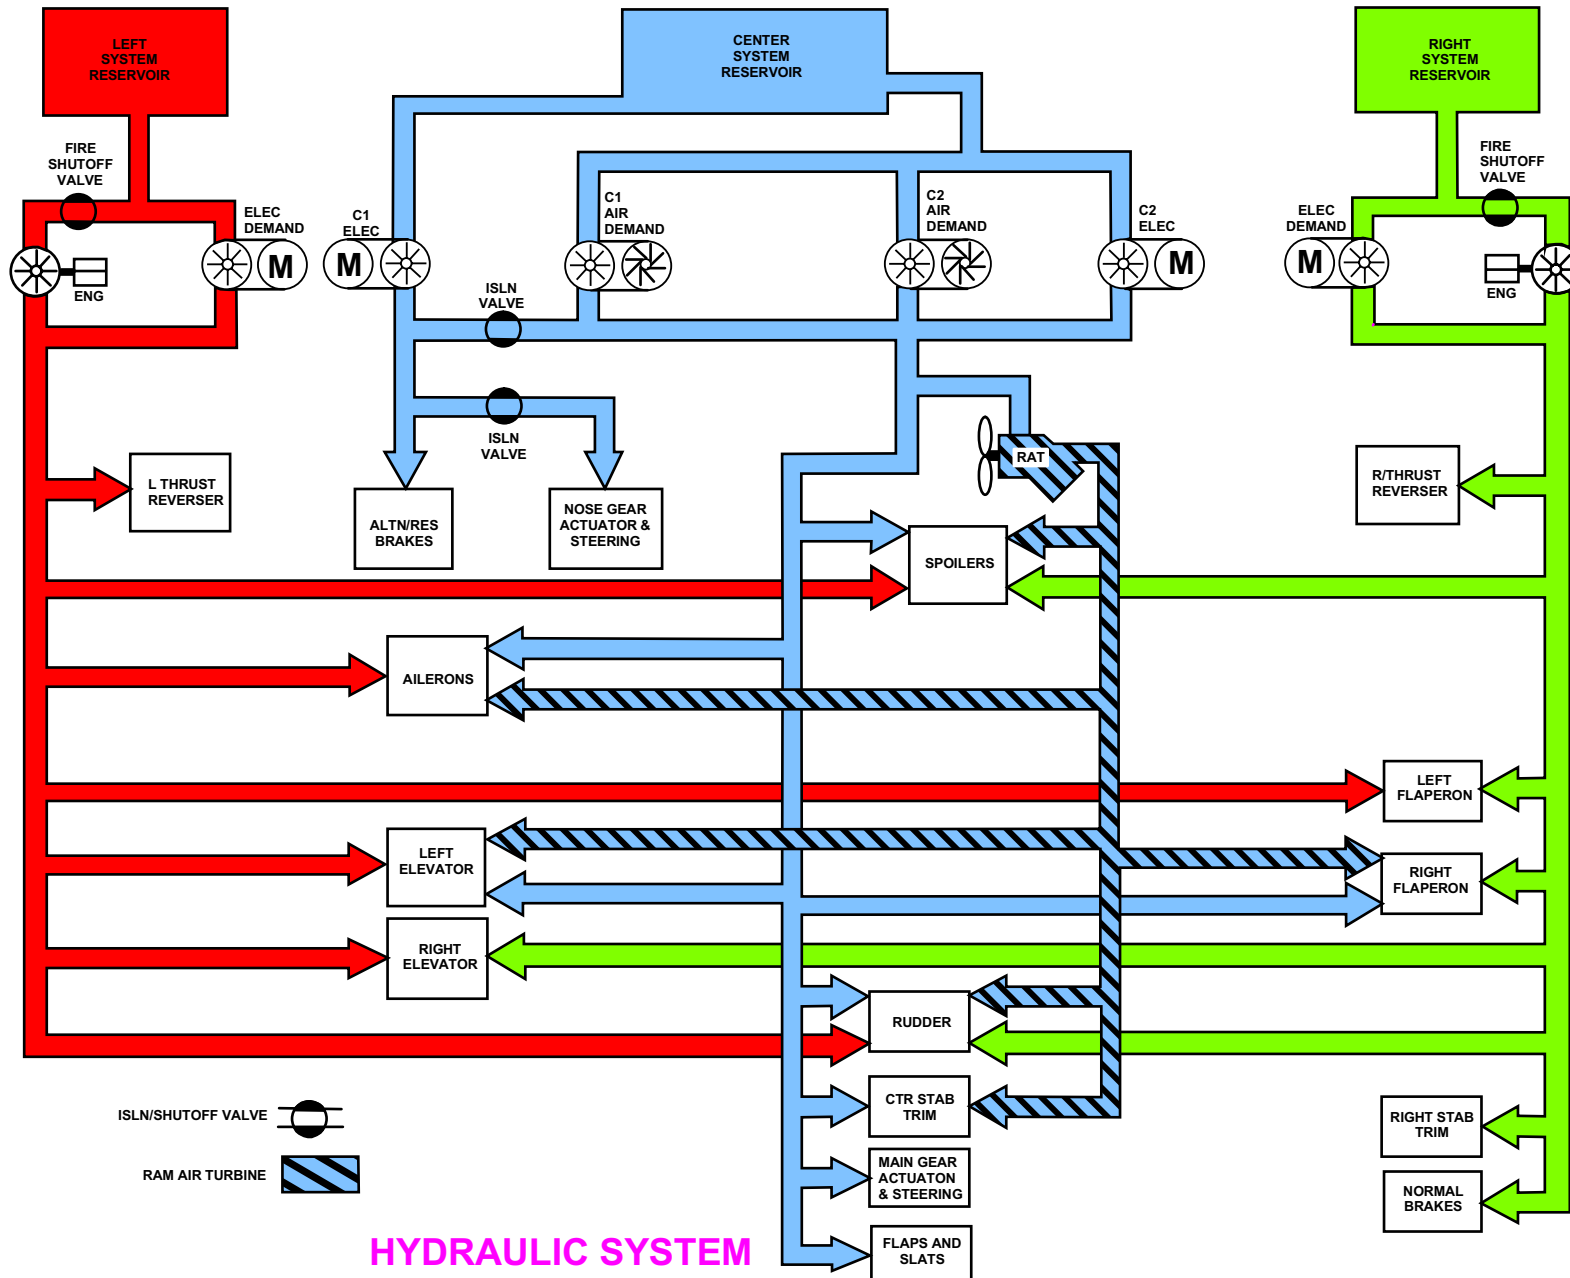

HYDRAULIC SYSTEM SCHEMATIC

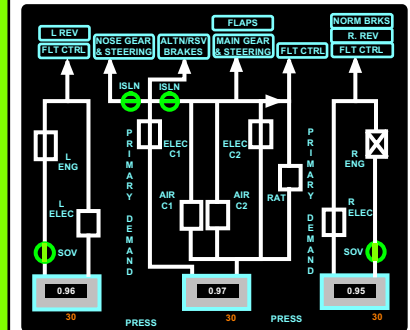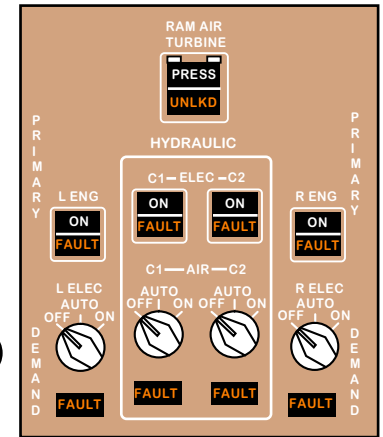  


## Hydraulic Systems Schematic

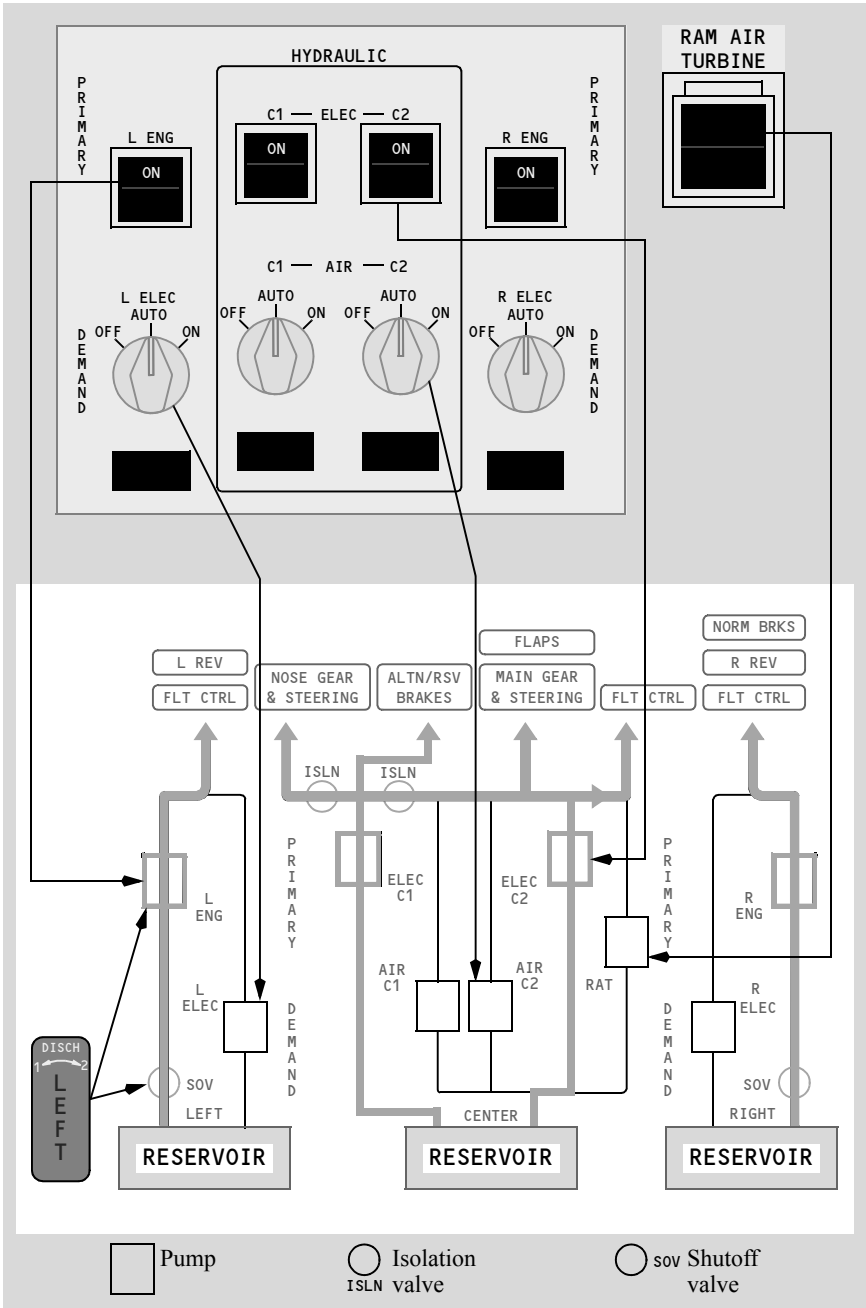 










## Actuator Control Electronics/Hydraulic Power Distribution

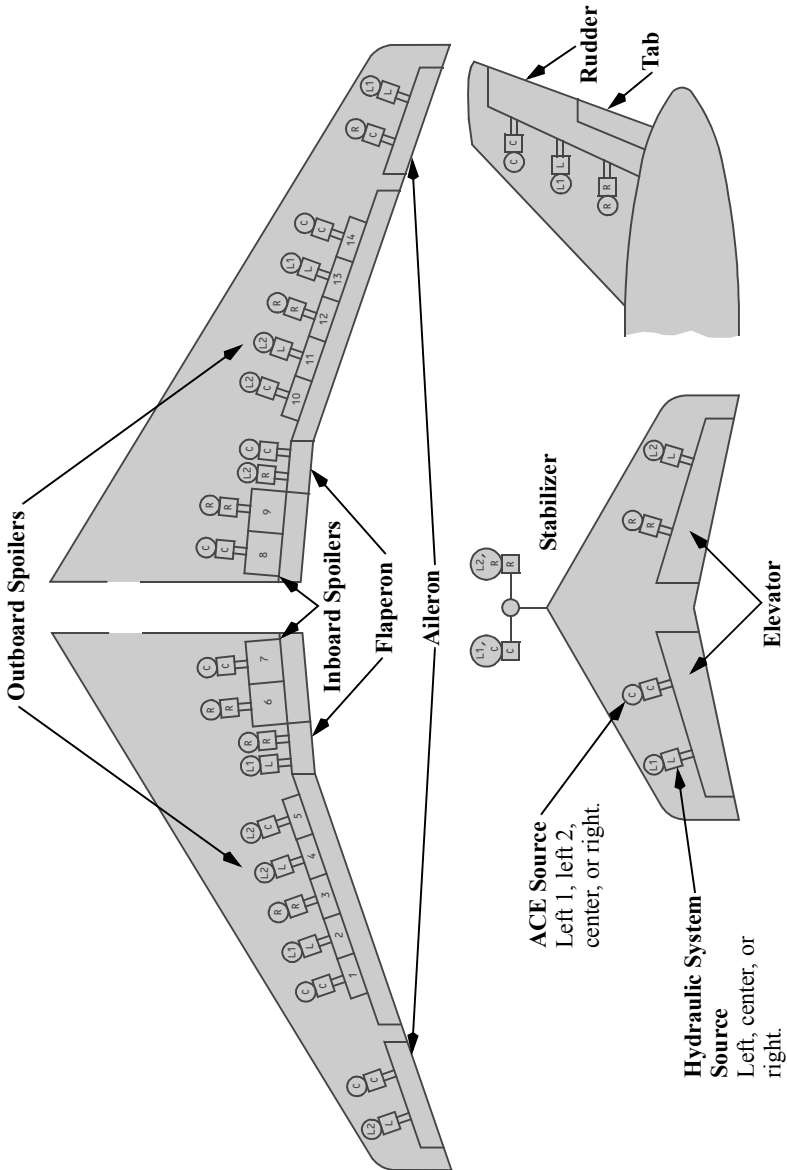 


## Normal Flight Control Synoptic

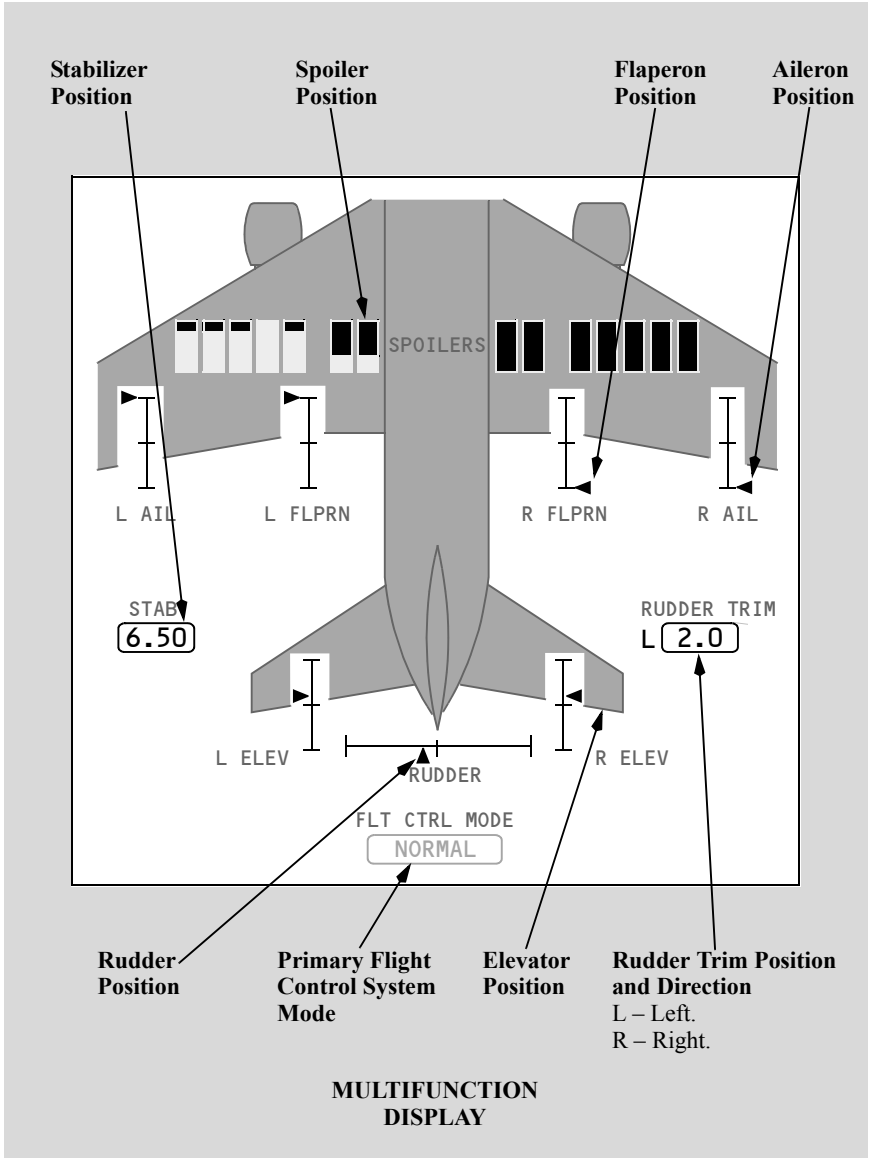 


# BOEING 777-200

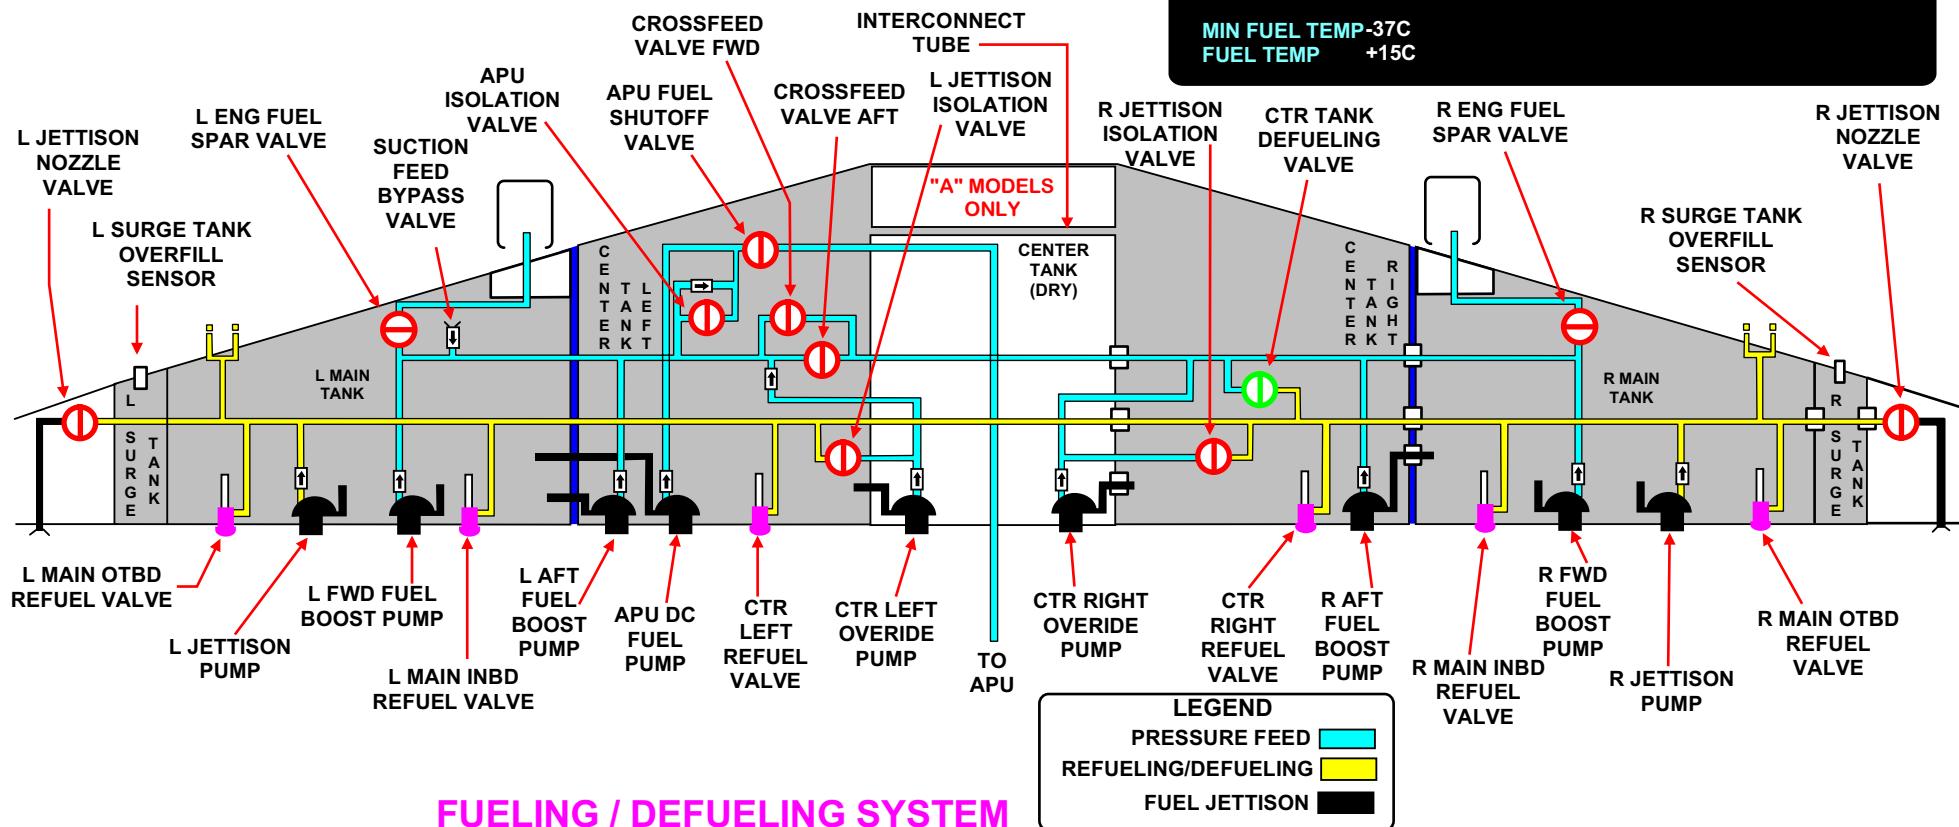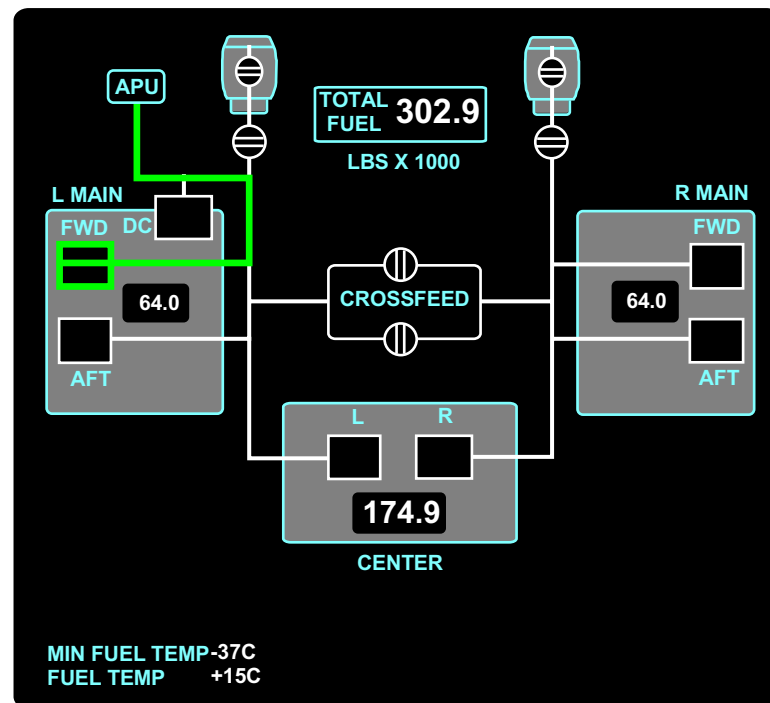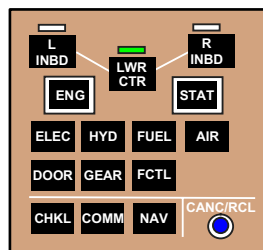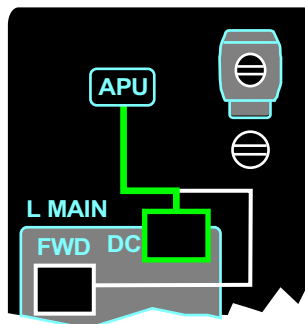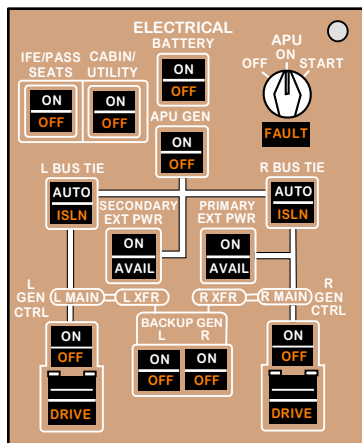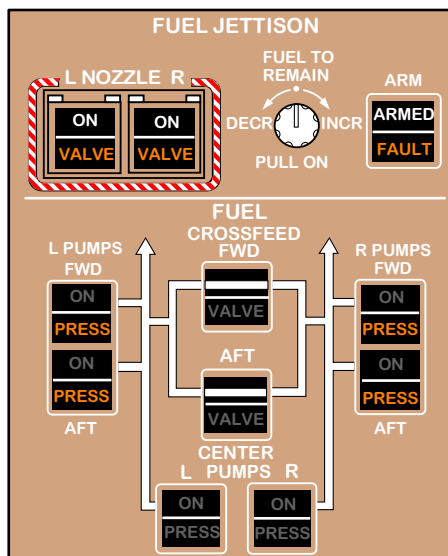      

## Bleed Air System Schematic

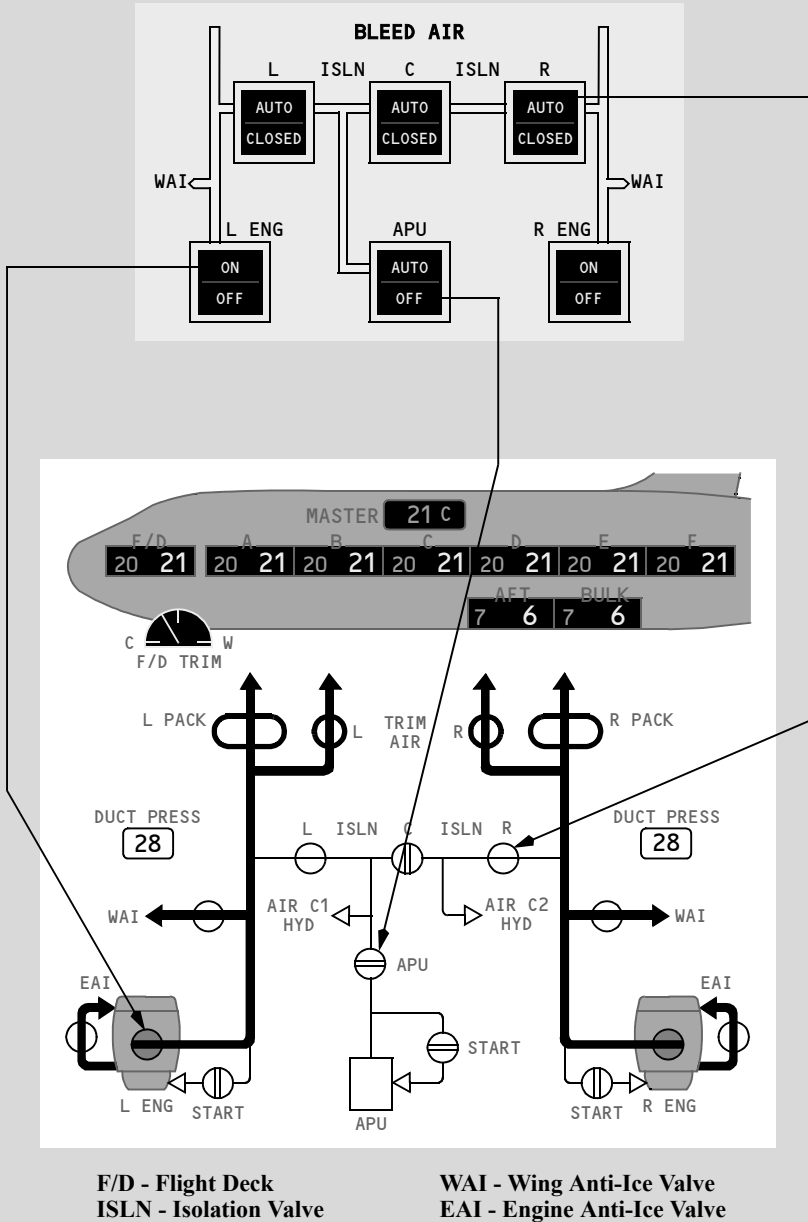 

# Airplane General, Emergency Equipment, Doors, Windows - Controls and Indicators

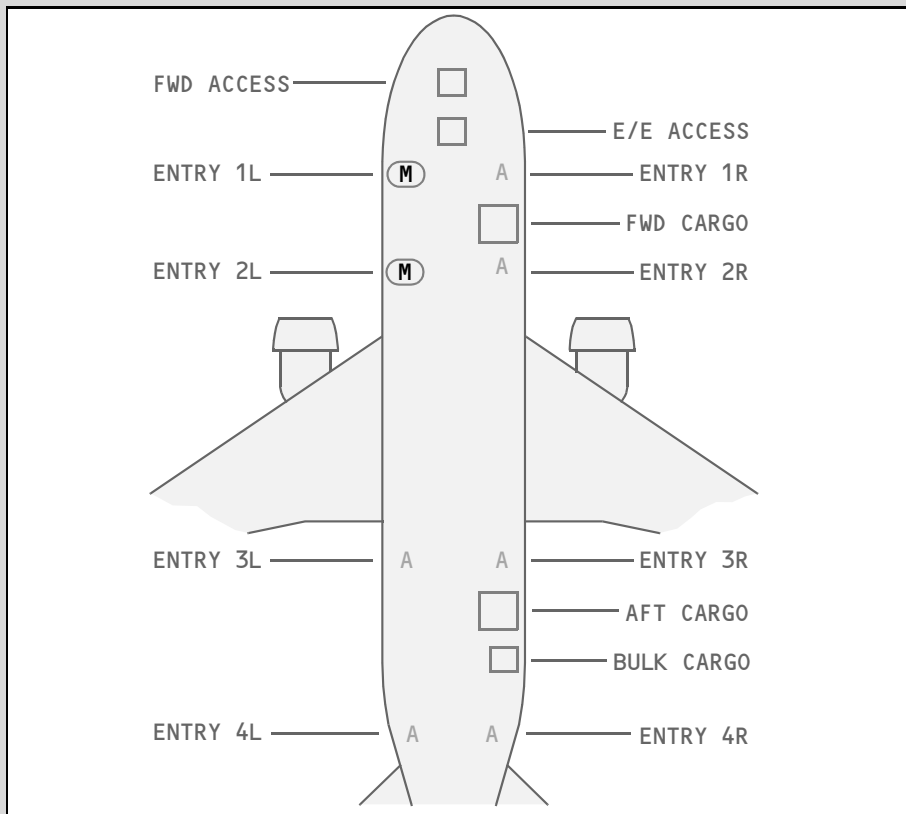 


A (green) – Door mode is armed  
M (white) – Door mode is manual.  
(blank) - Door mode is not available  
A/M can appear inside door symbol.


- ☐ (amber) – passenger door open
- ☐ (blank) – passenger door closed
- ☐ (white) – door status is not available
- ☐ (amber) – cargo/access door open
- ☐ (blank) – cargo/access door closed
- ☐ (white) – door status is not available

## MULTIFUNCTION DISPLAY

 
## Fuel Jettison Schematic

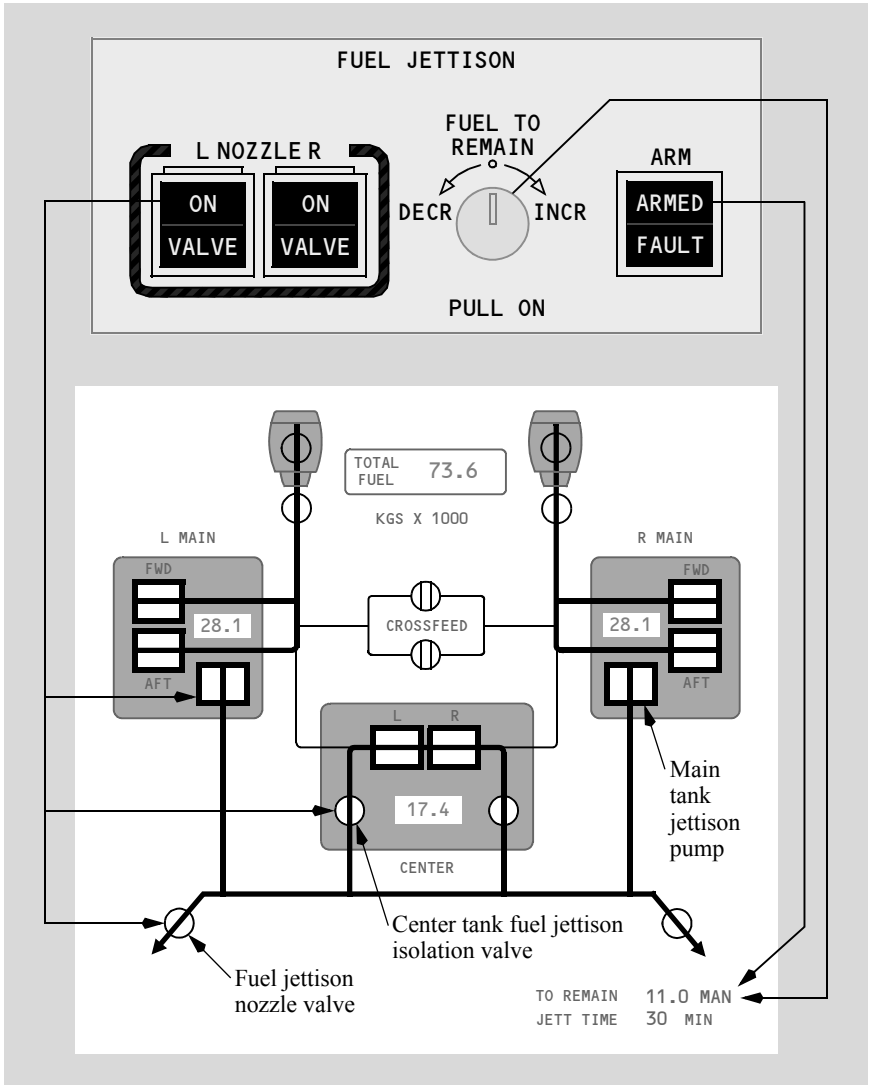


## Fuel System Schematic

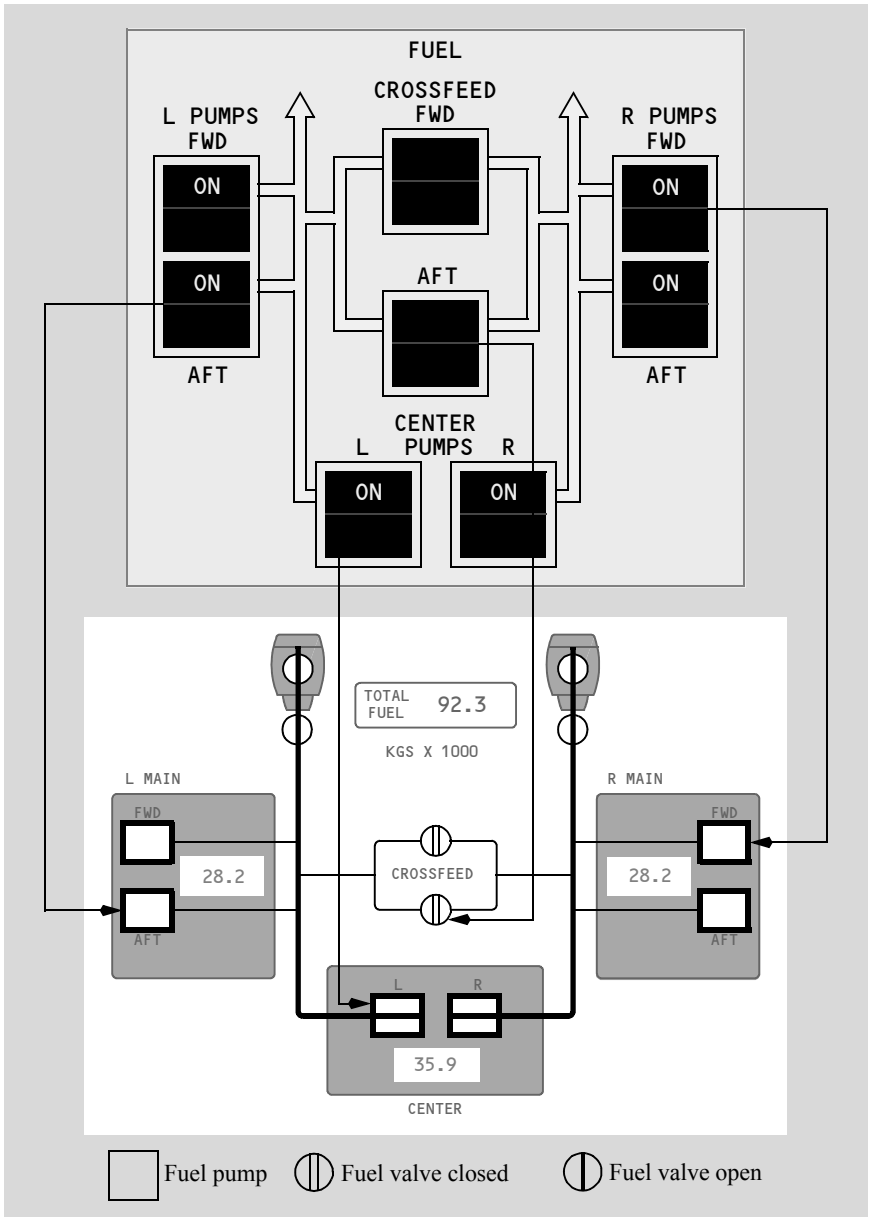 


Etgy 'Qz{i gp'U wgo

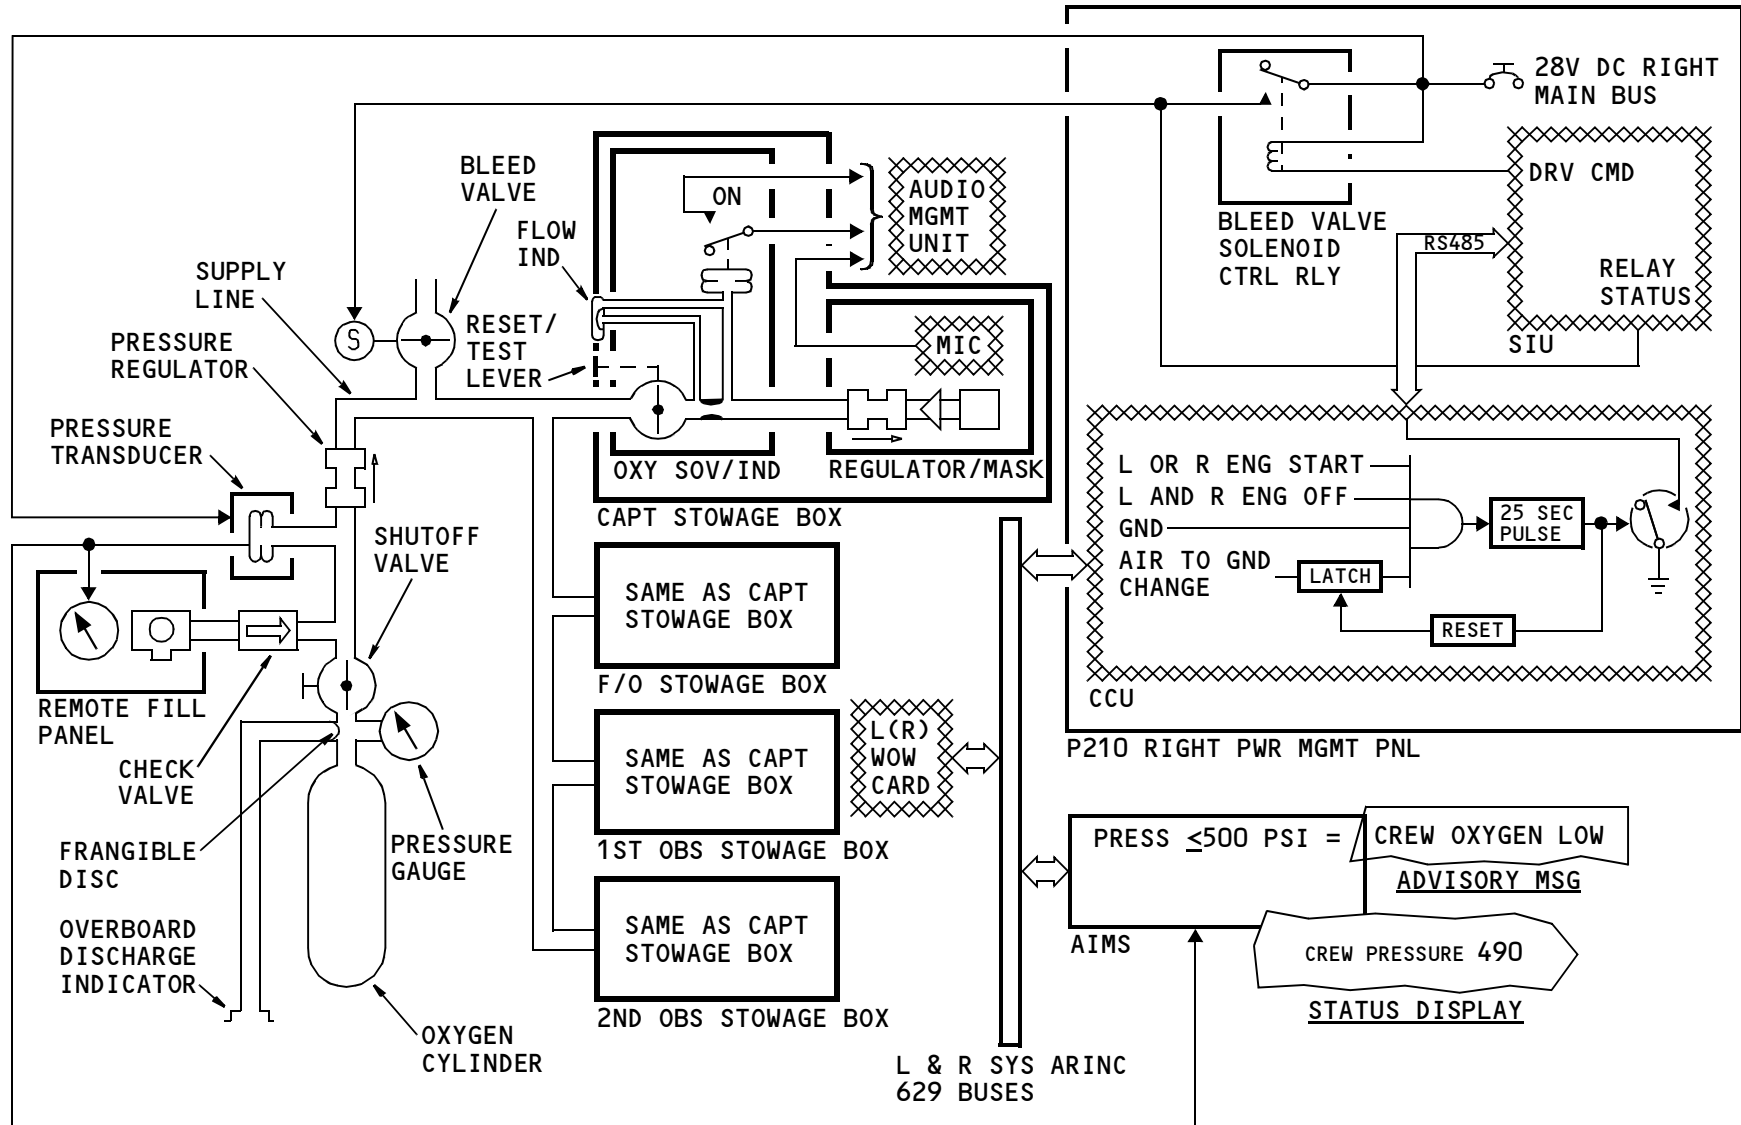 




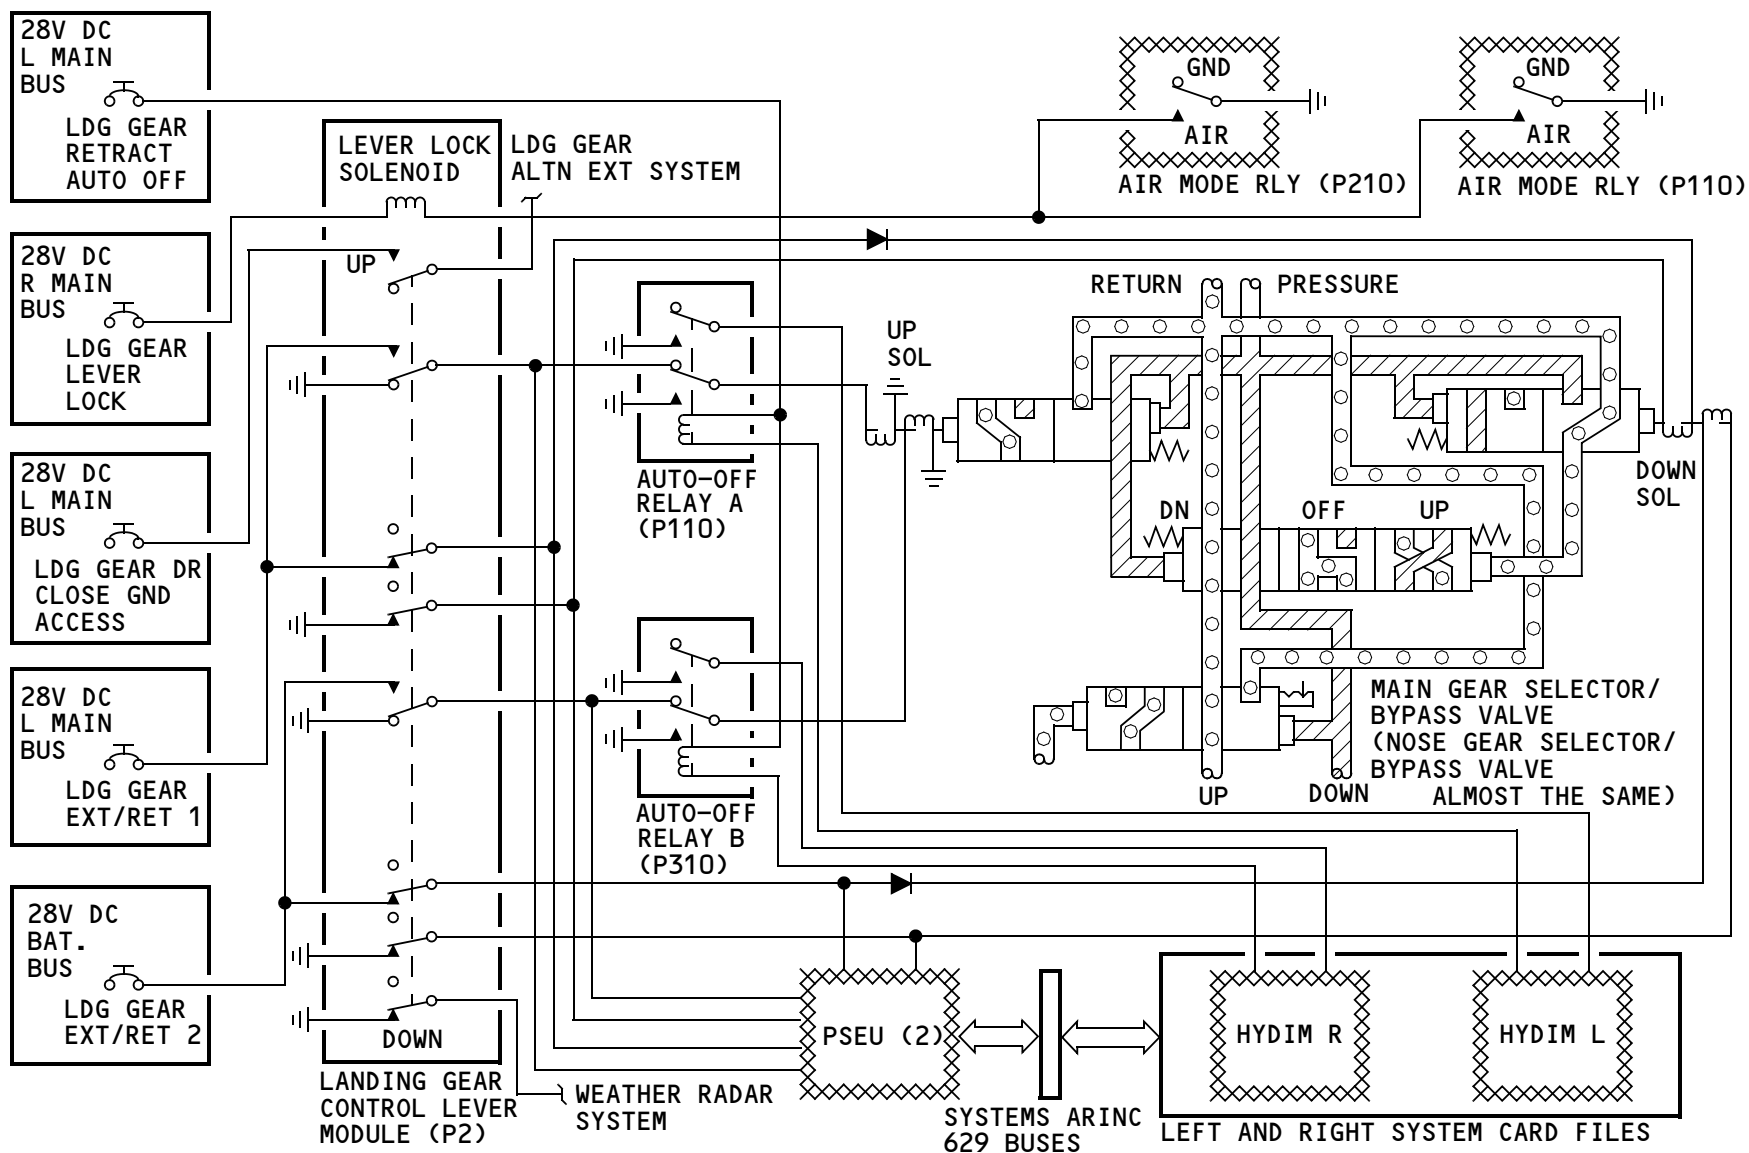 

 
LANDING GEAR CONTROL SYSTEM - FUNCTIONAL DESCRIPTION

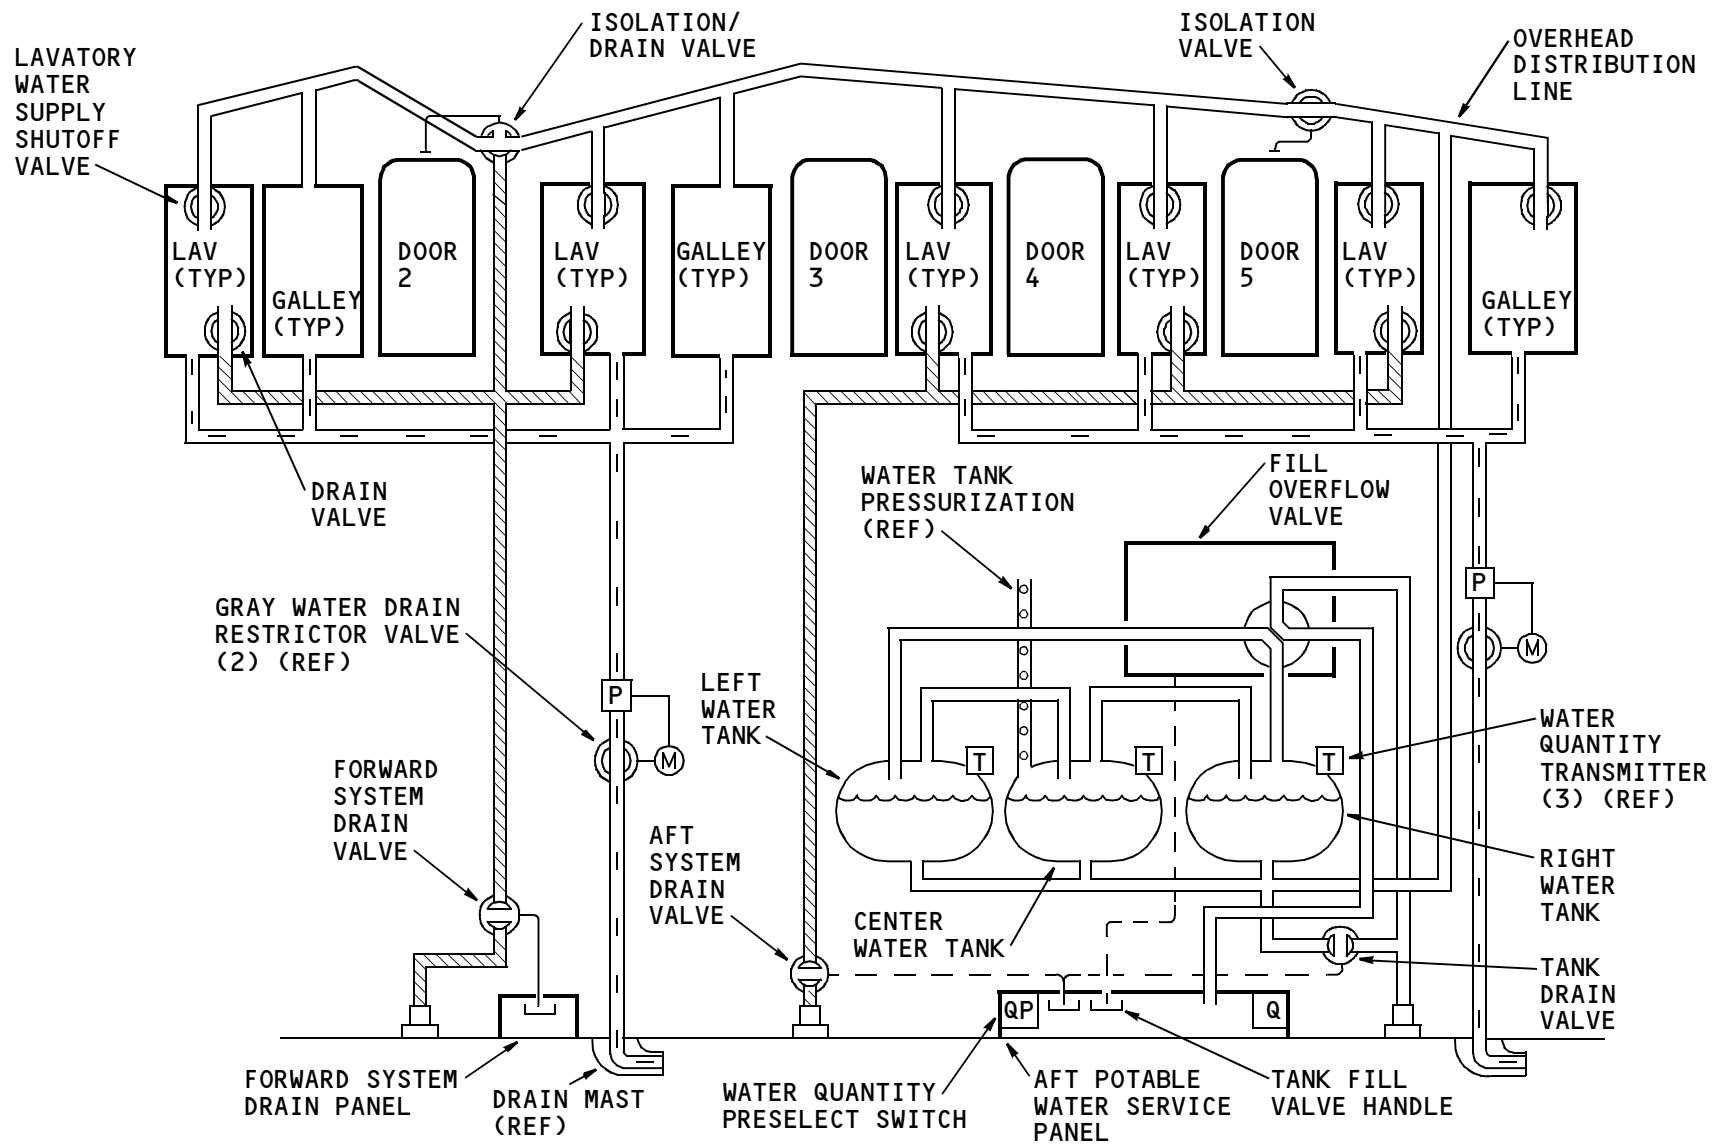

 
WATER STORAGE AND DISTRIBUTION - INTRODUCTION

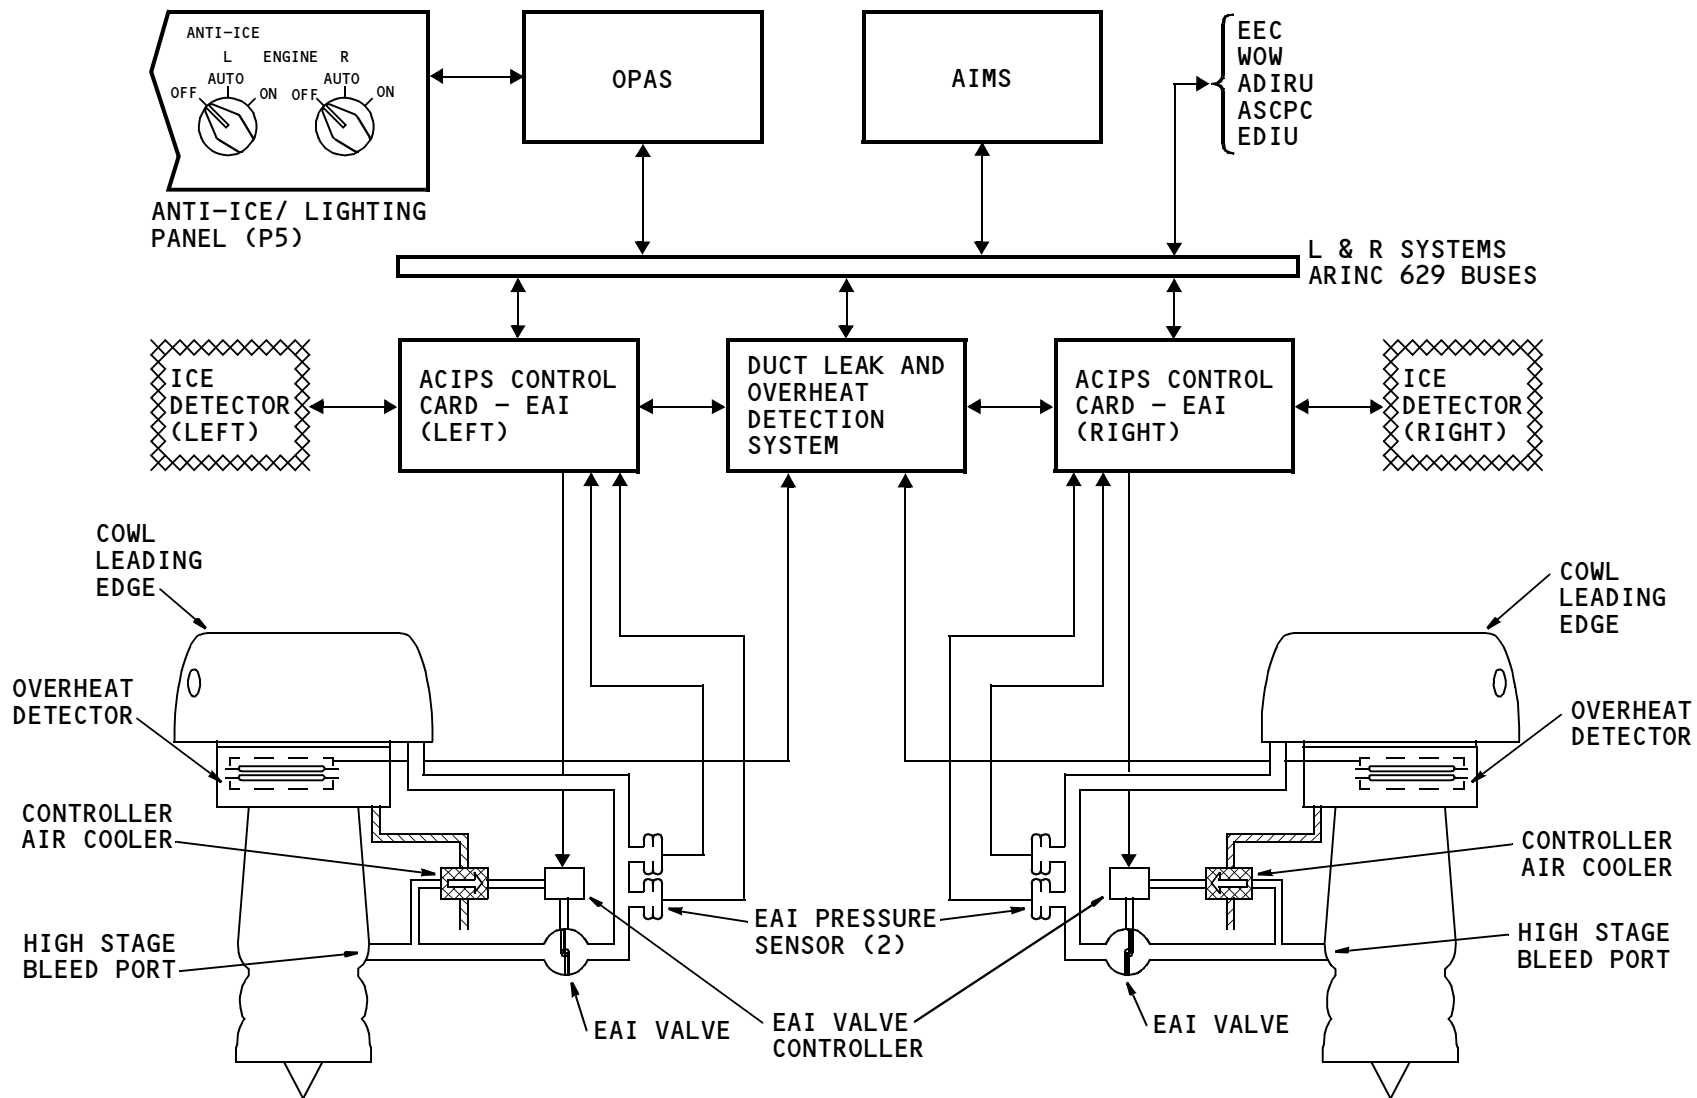


ENGINE ANTI-ICE - INTRODUCTION

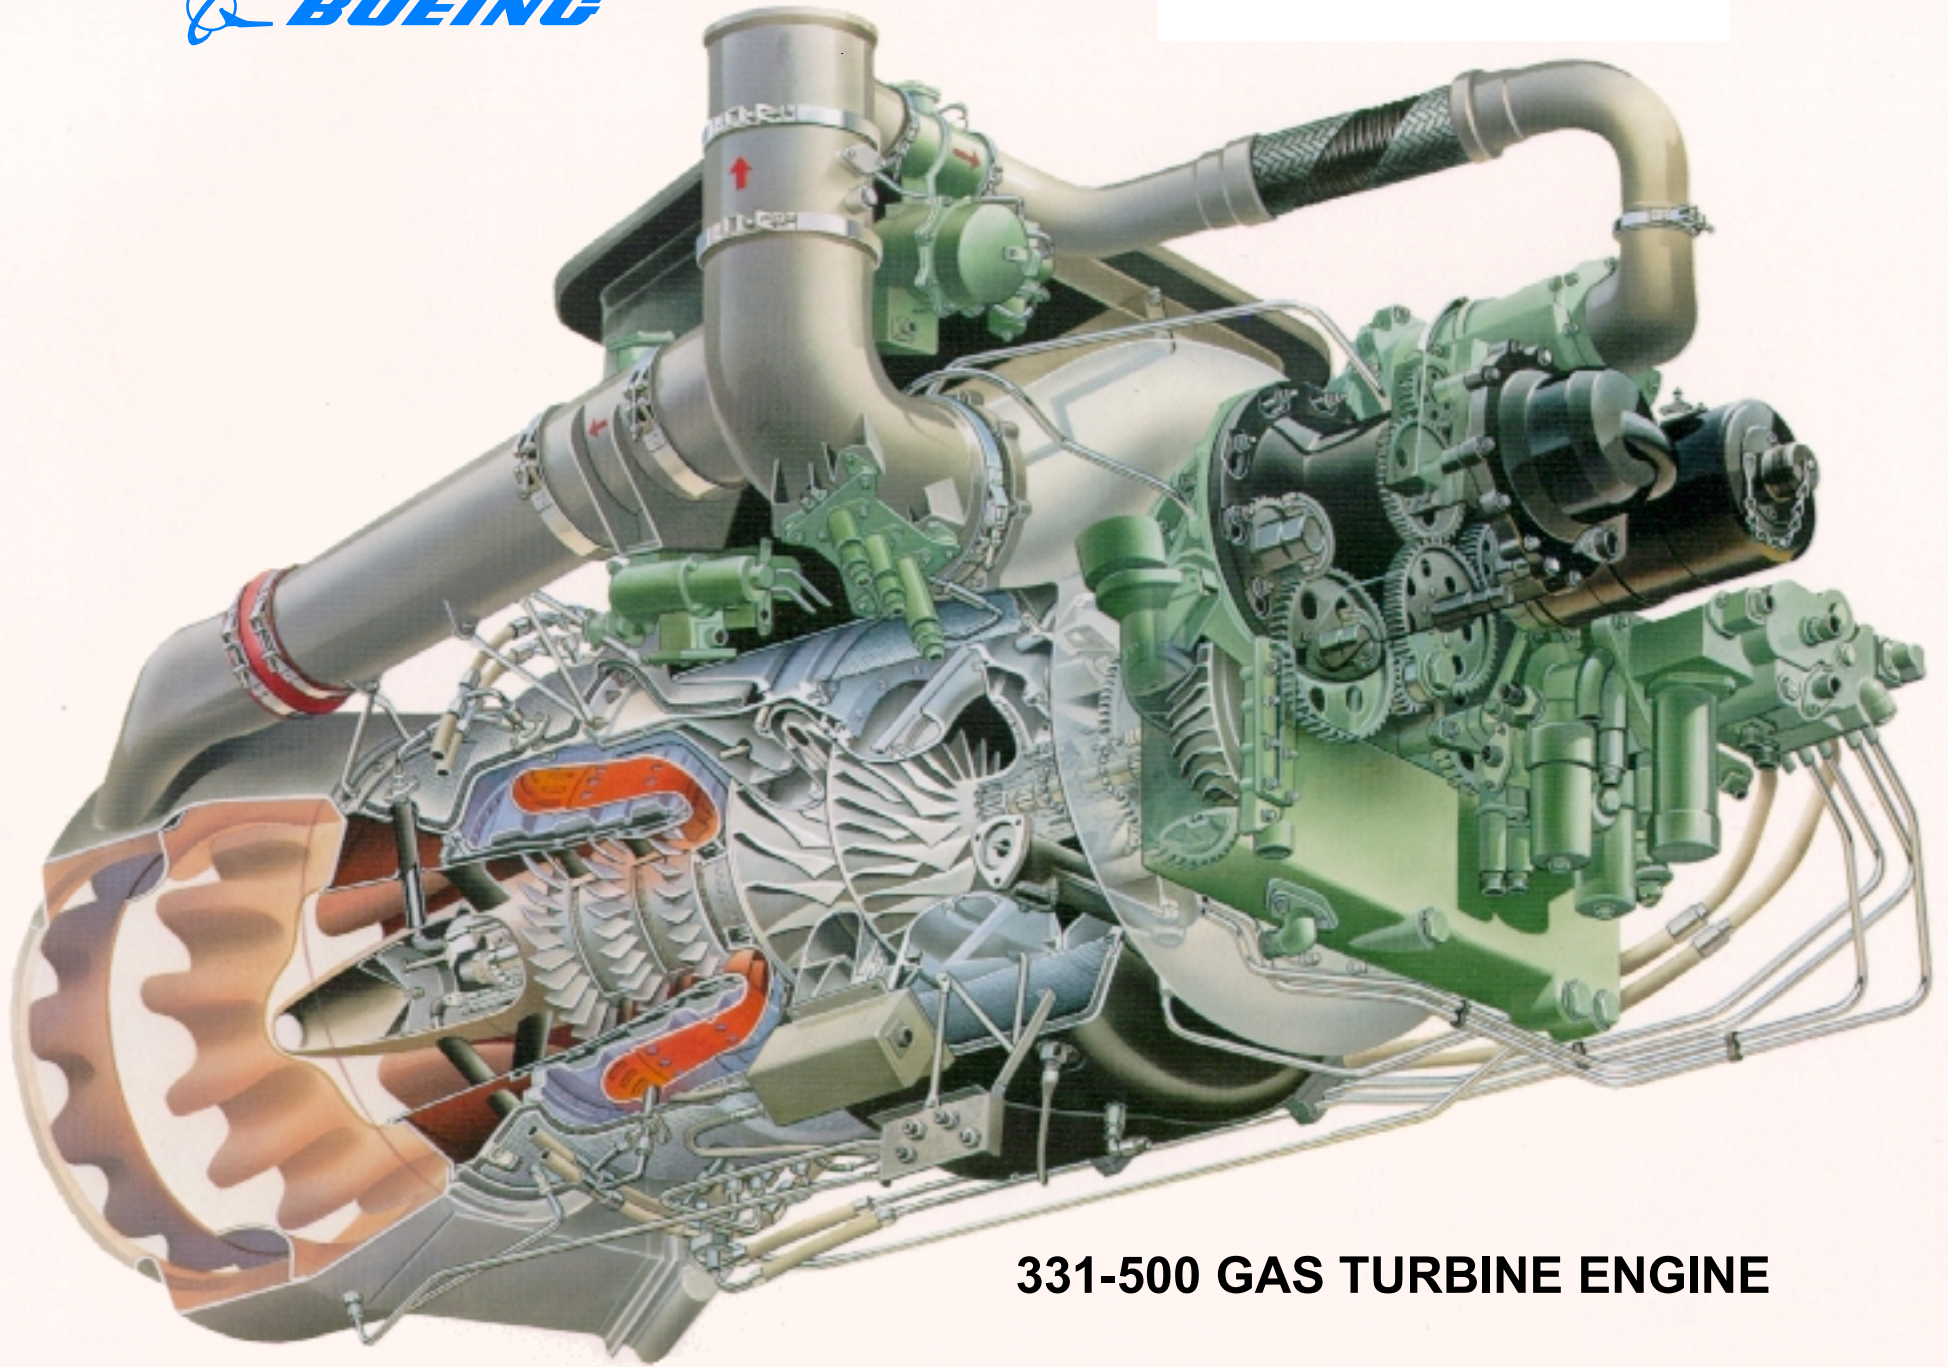 


**331-500 GAS TURBINE ENGINE**

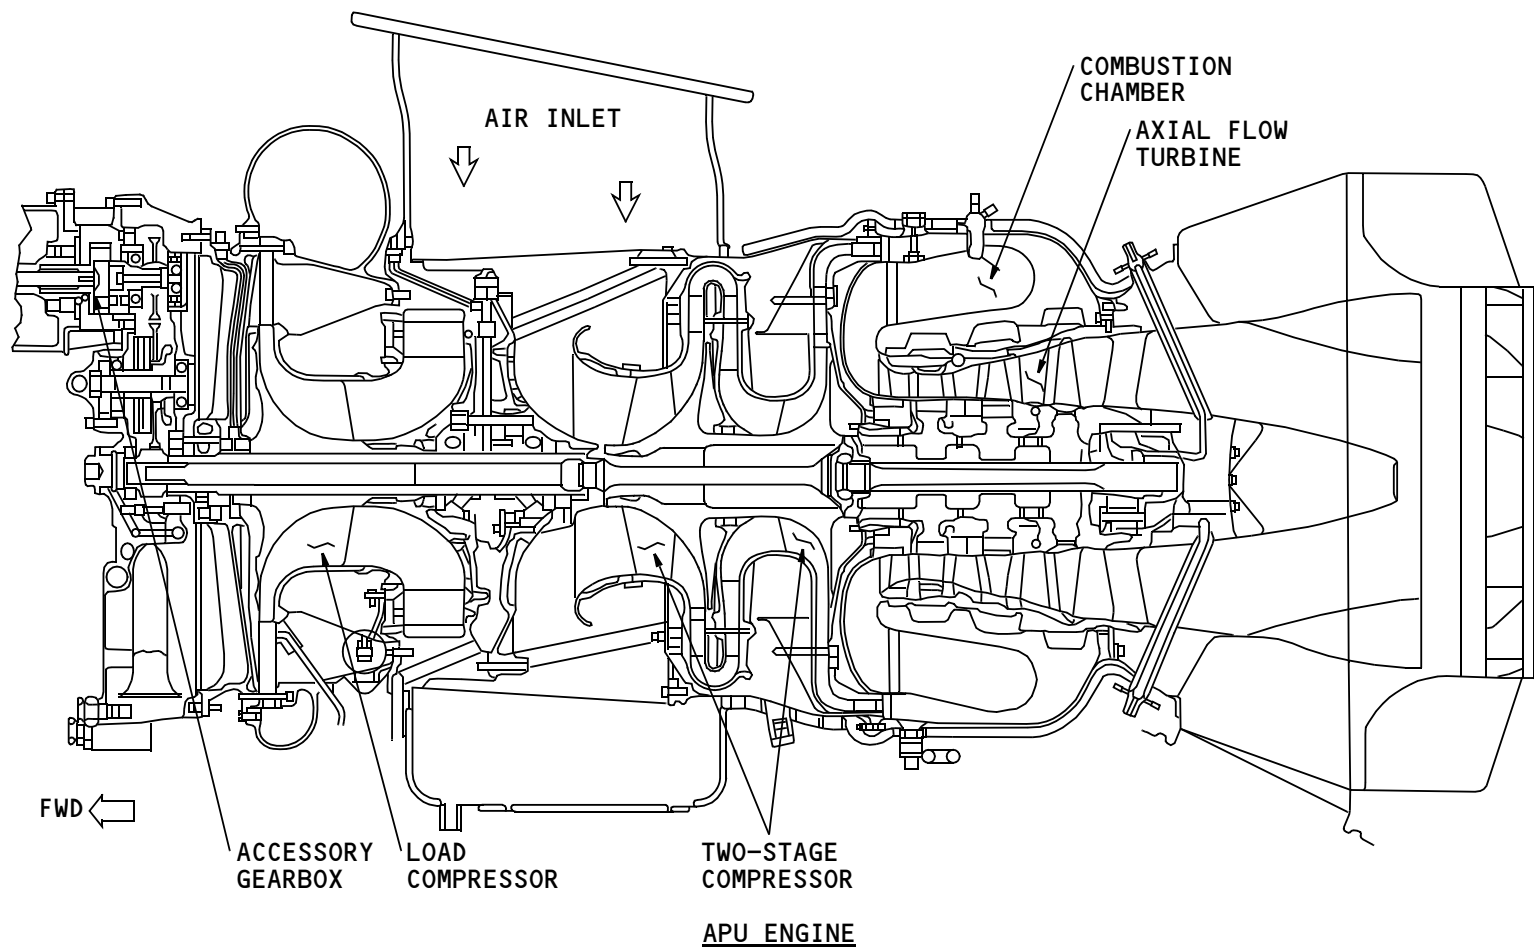 


APU ENGINE - INTRODUCTION

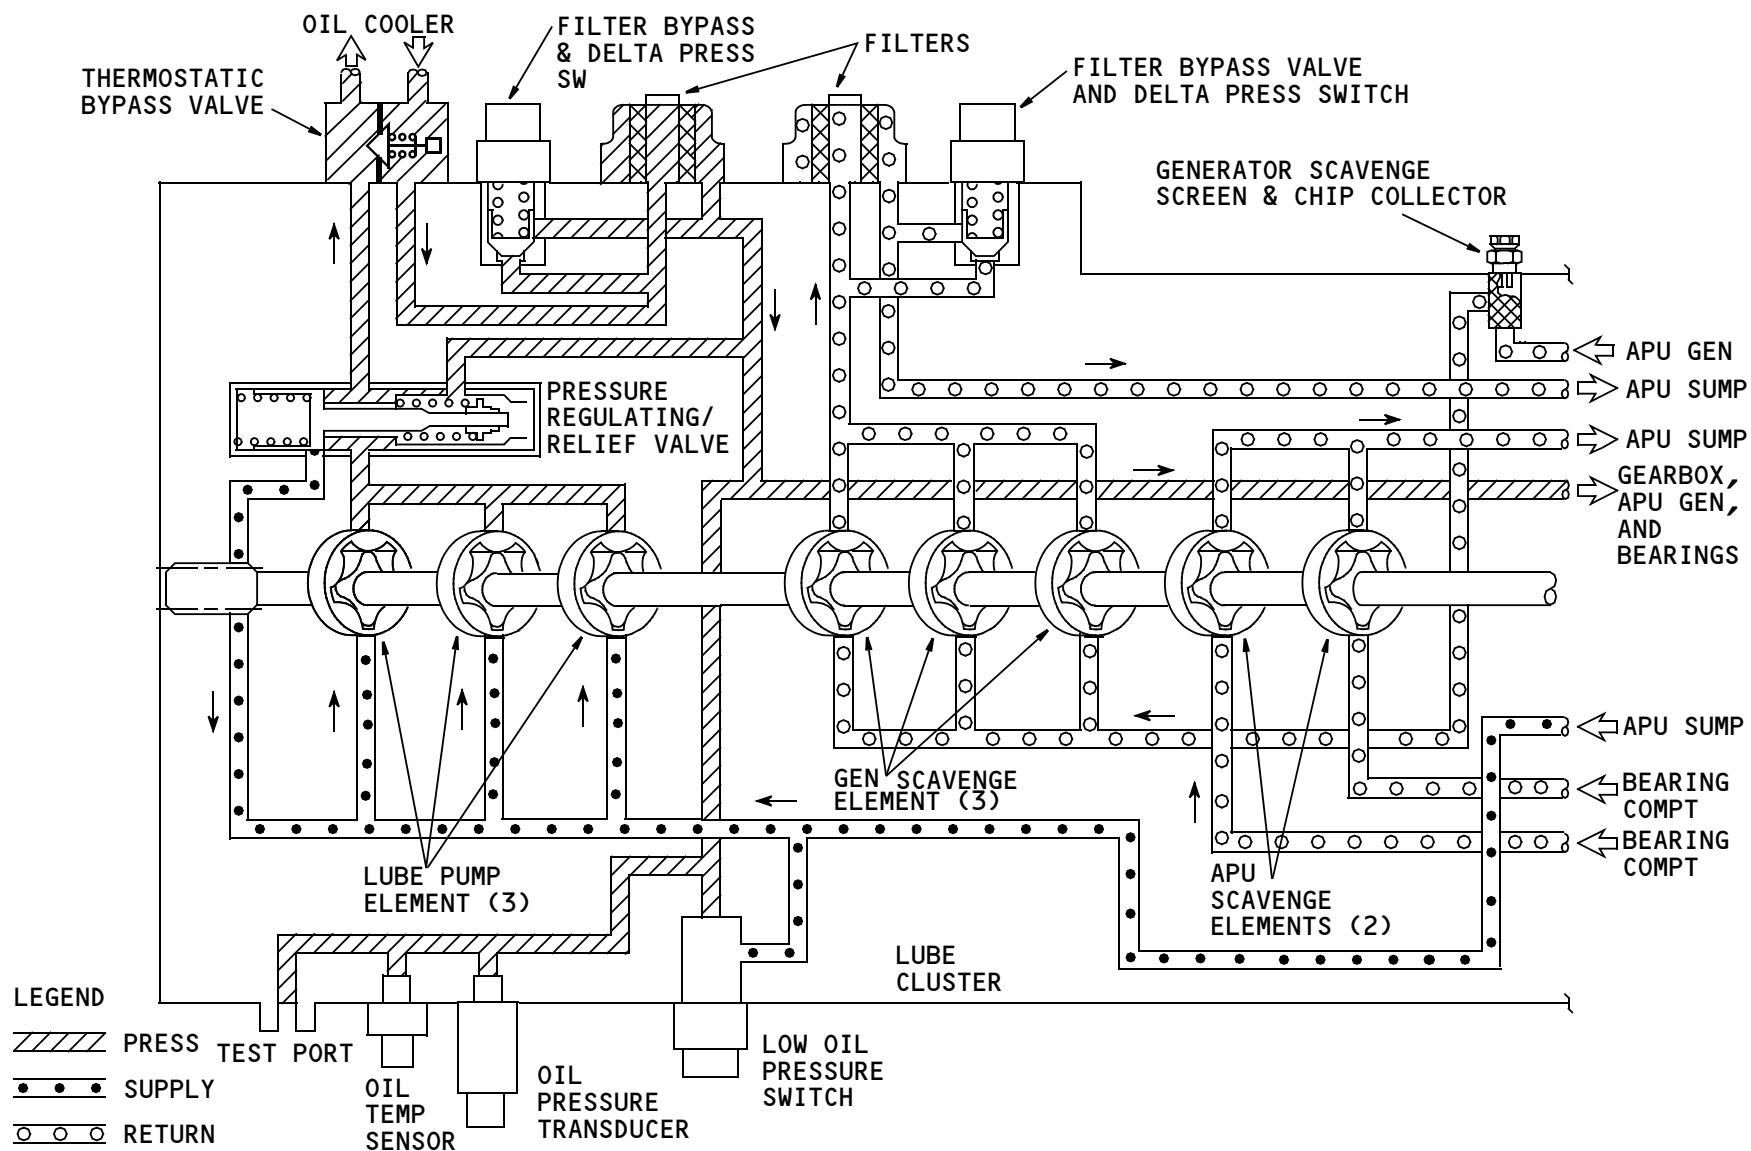 

 APU AND GENERATOR LUBRICATION SYSTEM - LUBE CLUSTER - FUNCTIONAL DESCRIPTION

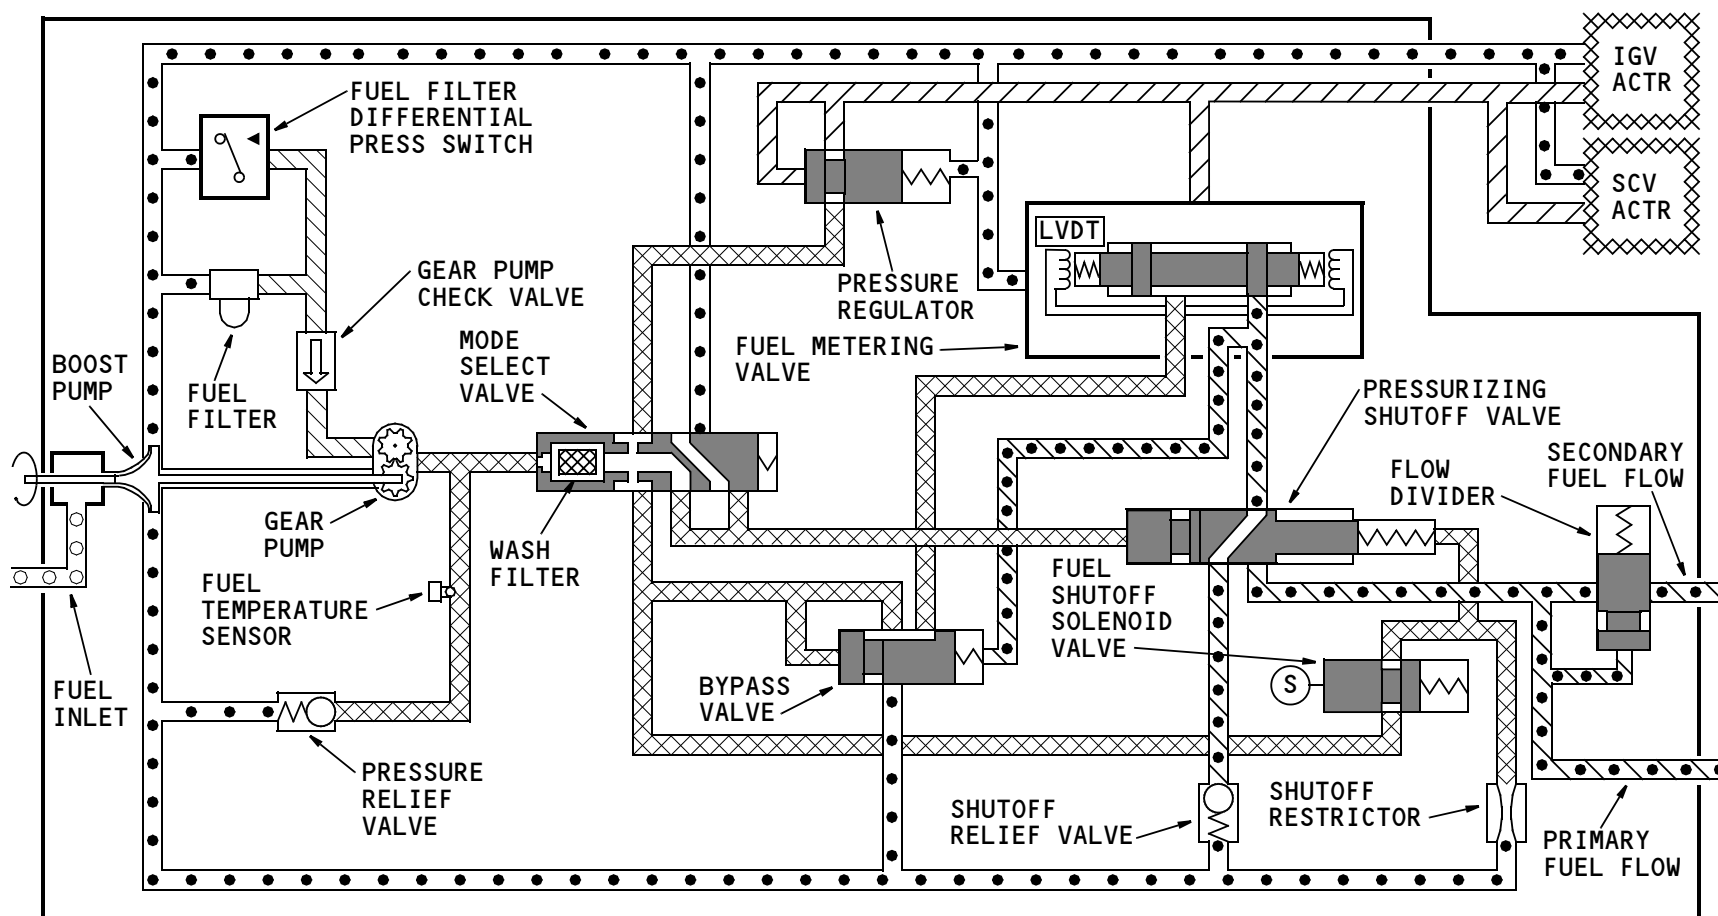

FUEL CLUSTER

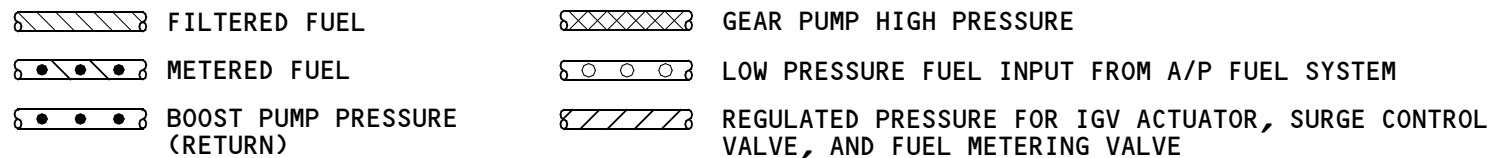 

APU FUEL SYSTEM - FUEL CLUSTER - FUNCTIONAL DESCRIPTION